



GOXTREME[®] PIONEER



Wide Angle
Lens



HDMI



Full HD



Waterproof
to 30m



Long-lasting
battery

 
USER'S MANUAL



For best results, we recommend using high quality Micro SD cards up to 32GB Class 10 with U3 High Speed or higher.

Before using the memory card for the first time, format it in the settings menu in your camera.

1. Always protect your camera from falls, blows and bumps.
2. Keep a sufficient distance from objects that generate strong magnetic fields or radio waves, e.g. electrical appliances, in order to prevent them from damaging the product or affecting the sound and image quality.
3. Store the camera cool (at room temperature) in a dry and dust-free location and never it to high temperatures or permanently direct sunlight.
4. To avoid potential data errors, do not place Micro SD Cards near highly magnetic objects.
5. In the unlikely event of overheating, smokes or unpleasant odors coming out of the unit, disconnect it immediately from the charging cable and remove the battery to avoid a fire.
6. While charging, keep the device away from children.
7. The product should only be charged via the USB port of a laptop or computer or a USB power adapter with a maximum power of 1000mAh.
8. Before using the camera in the water, make sure that all lids and closures on the camera and underwater housing are closed and sealed.
9. After using salt and chlorinated water, clean the housing and allow it to dry.
10. The camera should not be exposed to high temperature and humidity differences to avoid condensation inside the case or behind the lens. After under water use, the housing must be left open to prevent condensation or rusting.
11. The recording time depends on the selected resolution. After reaching a max. video recording time, the camera will stop automatically. It must be restarted manually. FAT32 file systems are unable to manage files larger than 4GB in size.
1080p / 30fps: max. 29 min.
12. The battery life is - depending on the settings and outside temperature - up to 90 minutes under optimal conditions.

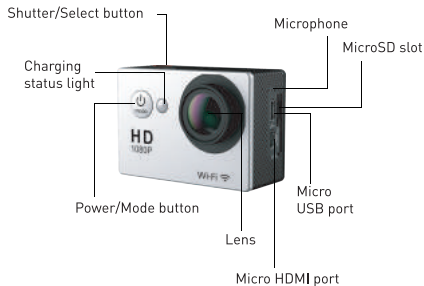







WATERPROOF HOUSING



MOUNTING YOUR CAMERA

    Attach your camera to helmets, gear and equipment.

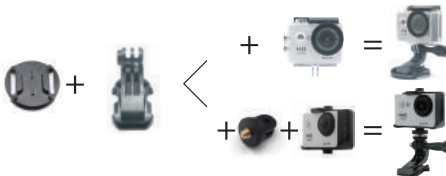

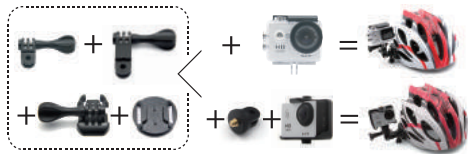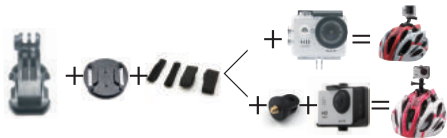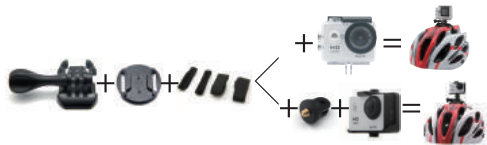


GETTING STARTED







 To power ON:
Press the **Power/Mode Button**.

To power OFF:
Press and hold the **Power/Mode Button**.

OVERVIEW

Turn the camera ON and repeatedly press the **Power/Mode Button** to cycle through camera modes and settings. The modes will appear in following order:



	Video	Record Video
	Photo	Capture a single photo
	Burst Photo	Capture photo bursts
	Time Lapse	Shoot a series of photos at set time intervals
	Video & Photo Playback	
	Adjust camera settings, resolution and more	



Press the **Shutter/Select Button** to enter the settings menu. Repeatedly press the **Power/Mode Button** to cycle through options and press the **Shutter/Select Button** to select desired option. Or use the **Up/Playback** or **Down/Wi-Fi Button** to cycle through the various options.

Time Stamp: Off/Date/Date & Time
 Exposure: +-2.0/+-1.7/+-1.3/+-1.0/+-0.7/+-0.3/0
 Photo Resolution: 12M, 8M, 5M, 2M
 Burst Photo: 3 Photos
 Photo interval/Time Lapse:
 2s/3s/5s/10s/20s/30s/60s
 Continuous shot: Off/On
 Power Frequency: 50Hz/60Hz/Auto
 Language: English/Traditional Chinese/Italian/Spanish/Portuguese/German/Dutch/France/Czech/Polish/Turkish/Russian/Japanese/Korean/Thai
 Date & Time: MM/DD/YY, DD/MM/YY, or YY/MM/DD
 Sound Indicator: Shutter On/Off, Start Up 1/2/3/, None, Beep On/Off, Volume 0/1/2/3
 Rotate Display: On/Off (For use when camera is mounted upside down)

Screen Saver: Off/1 min/3 min/5 min
Power Saver: Off/1 min/3 min/5 min
Format: No/Yes
Reset: No/Yes
Version: Displays current firmware version

VIDEO MODE

Video

To record Video, verify the camera is in Video mode. If the Video icon on your camera's LCD screen is not showing, press the Power/Mode Button repeatedly until it appears.

To start recording:

Press the Shutter/Select Button. The camera will emit one beep and the Camera Status Lights will flash while recording.

To stop recording:

Press the Shutter/Select Button. The Camera Status Lights stop flashing and the camera emits one beep to indicate recording has stopped.

This camera automatically stops recording when the battery is out of power. Your Video will be saved before the camera powers OFF.

Recording times are dependant on resolution and frame rate settings.

After reaching a max. video recording time (or file size*) the camera will automatically stop. It can only be restarted manually.

***FAT32 file system has a maximum single file size limit of 4GB: 1080p/30fps: 29min. max.**

PHOTO MODE

Photo

To capture a Photo, verify the camera is in Photo mode. If the Photo icon on your camera's LCD screen is not showing, press the Power/Mode Button repeatedly until it appears.

To take a photo:

Press the Shutter/Select Button. The camera will emit the camera shutter sound.

BURST PHOTO MODE

Burst Photo

To capture a Burst Photo series, verify the camera is in Burst Photo mode. If the Burst Photo icon on your camera's LCD screen is not showing, press the Power/Mode Button repeatedly until it appears. In Burst Photo mode, your camera takes 3 photos in 1.5 seconds.

To take a Burst Photo series:

Press the Shutter/Select Button. The camera will emit camera shutter sounds.

TIME LAPSE MODE

Time Lapse

To capture a Time Lapse series, verify the Continuous shot is ON and camera is in Time Lapse mode. If the Time Lapse icon on your camera's LCD screen is not showing, press the Power/Mode Button repeatedly until it appears. In Time Lapse mode, your camera captures a series of photos at 2, 3, 5, 10, 20, 30 or 60 second intervals.

The intervals at which the camera will operate in Time Lapse mode must first be set using the settings screen before recording in Time Lapse mode.

To take Time Lapse:

Press the Shutter/Select Button. The camera initiates countdown and emits the camera shutter sound each time a Photo is taken.

PLAYBACK

Playing Back Videos and Photo

To enter the Playback menu:

1. Verify the camera is in Camera mode.
2. Press the Up/Playback Button to enter the Playback menu.
3. Repeatedly press the Power/Mode Button to cycle through Video and Photo.
4. Press the Shutter/Select Button to select desired option.
5. Use Up/Playback Button or Down/Wi-Fi Button to cycle through the various options.
6. Press the Shutter/Select Button.
7. To return to the Playback menu, press the Power/Mode Button.
8. To exit, hold down the Up/Playback Button for two seconds.

STORAGE/MICRO SD CARDS

This camera is compatible with 16GB and 32GB capacity microSD, microSDHC, and microSDXC

memory cards. You must use a microSD card with at least a Class 10 speed rating. We recommend using brand name memory cards for maximum reliability in high-vibration activities.

BATTERY

Charging The Battery

1. Connect the camera to a computer or USB power supply.
 2. The Charging Status Light remains ON while the battery is charging.
 3. The Charging Status Light will turn OFF when the battery is fully charged.
- Charging Time: 5 hours

COMPATIBILITY

Compatibility varies by device. Content playback, sharing and access to the camera's memory card might be not available on some devices.

CAMERA APP

Connecting to the iSmart DV App

The **iSmart DV App** lets you control your camera remotely using a smartphone or tablet. Features include full camera control, live preview, photo playback and sharing of select content and more.

1. Download the iSmart DV App to your smartphone or tablet at the Google Play or Apple App Store.
2. Press the Power/Mode Button to power camera ON.
3. Make sure the camera is in Camera mode.
4. Press the Down/Wi-Fi Button to turn on Wi-Fi*.
5. In your smartphone or tablet's Wi-Fi settings, connect to the network called "Pioneer" followed by a series of numbers.
6. Enter the password "1234567890".
7. Open the iSmart DV App on your smartphone or tablet.

* Press and hold the Down/Wi-Fi Button for three seconds to turn OFF Wi-Fi.

The **iSmart DV App** is compatible with smartphones and tablets listed below:

For Apple iOS

- * iPhone5, 5s, 6 (Plus), & 6s, 7 (Plus)
(iOS9 & iOS10)
- * iPad Air & Mini (iOS9 & iOS10)

For Android

- * Android 4X Quad-core devices (up to Android 7.0)



iOS / Android
App Download

NOTE

Before using your camera in the water please verify that all lids and locks are tightly closed and sealed on the camera and the underwater case.

After use, clean the housing of salt and chlorine water and then let it dry.

The camera should not be exposed to large temperature and humidity differences to avoid condensation inside the housing or behind the lens. After underwater use, the case must be kept open to avoid condensation or rust.

DECLARATION OF CONFORMITY

easypix hereby declares that the product GoXtreme Pioneer is in conformity to all the essential requirements of Directive 1999/5/EC.

The declaration of conformity can be downloaded here:

http://www.easypix.info/download/pdf/doc_goxtreme_pioneer.pdf

For technical help please visit our support area on www.easypix.eu.



Only EU

easypix[®]
LIFESTYLE ELECTRONICS