



## QUICK GUIDE


**FULL MANUAL ONLINE:**

[www.easypix.info/download-manuals/download/goxtreme-pioneer/](http://www.easypix.info/download-manuals/download/goxtreme-pioneer/)

For best results, we recommend using high quality Micro SD cards up to 32GB Class 10 with U3 High Speed or higher.

Before using the memory card for the first time, format it in the settings menu in your camera.

1. Always protect your camera from falls, blows and bumps.
2. Keep a sufficient distance from objects that generate strong magnetic fields or radio waves, e.g. electrical appliances, in order to prevent them from damaging the product or affecting the sound and image quality.
3. Store the camera cool (at room temperature) in a dry and dust-free location and never it to high temperatures or permanently direct sunlight.
4. To avoid potential data errors, do not place Micro SD Cards near highly magnetic objects.
5. In the unlikely event of overheating, smokes or unpleasant odors coming out of the unit, disconnect it immediately from the charging cable and remove the battery to avoid a fire.
6. While charging, keep the device away from children.
7. The product should only be charged via the USB port of a laptop or computer or a USB power adapter with a maximum power of 1000mAh.
8. Before using the camera in the water, make sure that all lids and closures on the camera and underwater housing are closed and sealed.
9. After using salt and chlorinated water, clean the housing and allow it to dry.
10. The camera should not be exposed to high temperature and humidity differences to avoid condensation inside the case or behind the lens. After under water use, the housing must be left open to prevent condensation or rusting.
11. The recording time depends on the selected resolution. After reaching a max. video recording time, the camera will stop automatically. It must be restarted manually. FAT32 file systems are unable to manage files larger than 4GB in size.  
1080p / 30fps: max. 29 min.
12. The battery life is - depending on the settings and outside temperature - up to 90 minutes under optimal conditions.

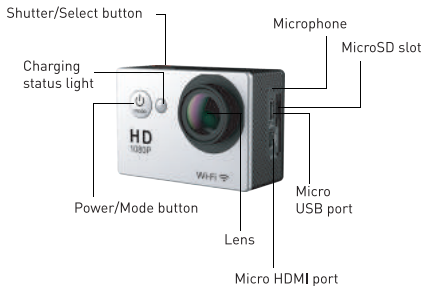

---

## GETTING STARTED

---

To power ON:

Press the **Power/Mode Button**.

To power OFF:

Press and hold the **Power/Mode Button**.

Turn the camera ON and repeatedly press the **Power/Mode Button** to cycle through camera modes and settings.

---

## CAMERA APP

---

### Connecting to the iSmart DV App

The **iSmart DV App** lets you control your camera remotely using a smartphone or tablet. Features include full camera control, live preview, photo playback and sharing of select content and more.

1. Download the iSmart DV App to your smartphone or tablet at the Google Play or Apple App Store.
2. Press the Power/Mode Button to power camera ON.
3. Make sure the camera is in Camera mode.
4. Press the Down/Wi-Fi Button to turn on Wi-Fi\*.
5. In your smartphone or tablet's Wi-Fi settings, connect to the network called "Pioneer" followed by a series of numbers.
6. Enter the password "1234567890".
7. Open the iSmart DV App on your smartphone or tablet.

\* Press and hold the Down/Wi-Fi Button for three seconds to turn OFF Wi-Fi.

The **iSmart DV App** is compatible with smartphones and tablets listed below:

### For Apple iOS

\* iPhone5, 5s, 6 (Plus), & 6s, 7 (iOS9 & iOS10)

\* iPad Air & Mini (iOS9)

### For Android

\* Android 4X Quad-Core Geräte (up to Android 7.0)



**iSmart DV**



#### DECLARATION OF CONFORMITY

easypix hereby declares that the product GoXtreme Pioneer is in conformity to all the essential requirements of Directive 1999/5/EC.

The declaration of conformity can be downloaded here: [http://www.easypix-.info/download/pdf/doc\\_goxtreme\\_pioneer.pdf](http://www.easypix-.info/download/pdf/doc_goxtreme_pioneer.pdf)

For technical help please visit our support area on [www.easypix.eu](http://www.easypix.eu).



**Only EU**

**easypix**<sup>®</sup>  
LIFESTYLE ELECTRONICS