


GET STARTED WITH YOUR NEW ACTION CAM

Please follow these steps before using the camera for the first time.

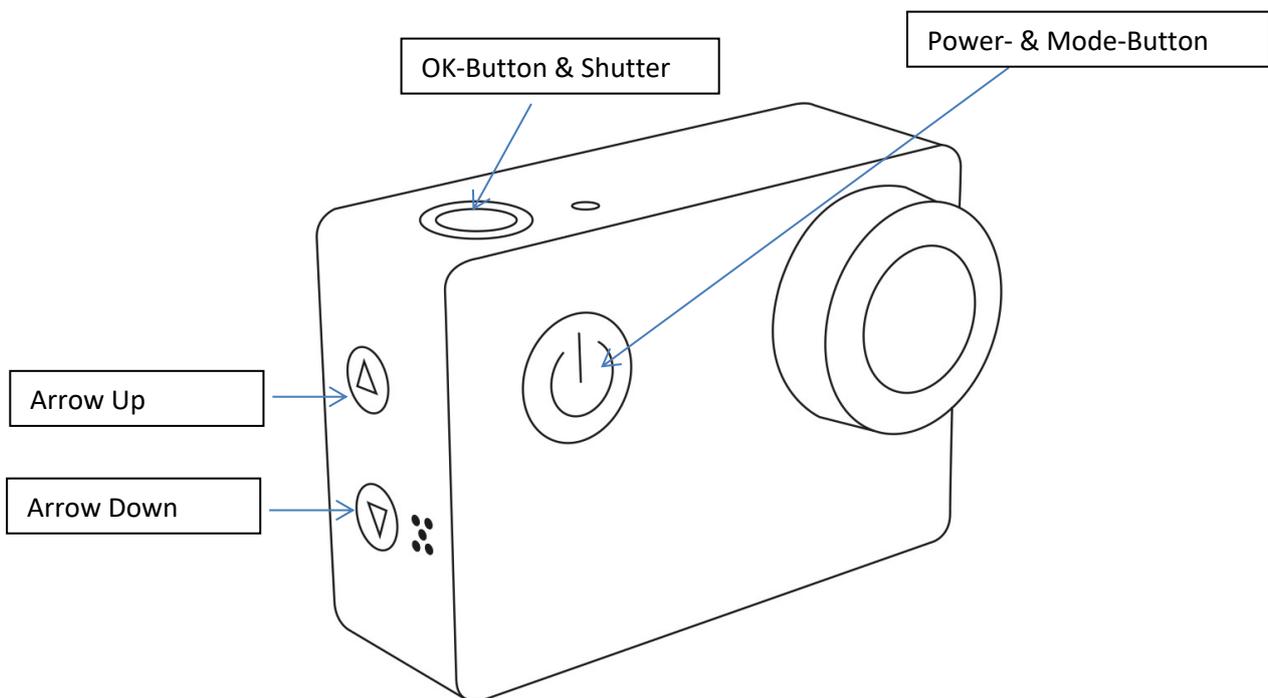

Step 1: CHARGE THE BATTERY

Please first charge the battery for 5-6 hours. Note that the camera must be switched off manually during charging and must remain switched off. Only then will the battery be charged correctly.

Step 2: SWITCH THE CAMERA ON AND OFF

Press and hold the power-button on the camera for about 3 seconds to turn on the camera. To turn the camera off, press and hold the power-button again for about 3 seconds.

Step 3: SWITCHING BETWEEN THE MODES & GENERAL OPERATING INSTRUCTIONS

1. Camera models without touch screen:

The on/off button is also the mode button on most camera models.

Pressing this button toggles between the different modes:

Video > Photo > Playback > Settings Setup

When the camera is turned on, it will first be in video capture mode.

To enter the settings menu, press the mode button several times in succession.

In the setup, you can use the arrow keys on the side of the camera to navigate to the various submenus.

To select a sub-item, press the OK button at the top of the camera to confirm.

Each time you want to change a setting, you must confirm the change with the OK button. Confirming a setting automatically returns you to the setup.

Pressing the power button will return you to the video recording mode at any time.

Please note: If the screen saver turns on and the screen turns black, simply press any button (OK, Power, Arrow buttons) to turn the screen back on.

2. Camera models with touch screen:

The on/off button is also the mode button on most camera models.

Pressing this button toggles between the different modes:

Video > Photo > Playback > Settings Setup

You can also change the mode by swiping your finger across the screen from left to right.

When the camera is turned on, it will first be in video capture mode. To enter the settings menu, press the mode button several times in succession or tap the "Settings" icon on the screen.

In the settings menu, tap it with your finger or confirm with the OK button on the camera.

Pressing the power button will return you to the video recording mode at any time.

Step 4: SET UP THE LANGUAGE

When delivered, the menu of your GoXtreme camera is displayed in English by default.

In this way you can set your desired language:

- Follow the steps described in step 3 and go to the settings menu.
- In the setup, use the arrow keys on the side of the camera to navigate to the 'Language' submenu.
- Confirm the selection of the language menu with the OK button.
- Use the arrow keys on the side of the camera to select the desired language and confirm your selection with the OK button.

Step 5: FORMAT THE SD CARD

An SD card is not included in most camera models.

You must therefore format your SD card before using it in the camera.

Caution! Formatting the SD card deletes all files.

Therefore, save your files on a PC, an external hard disk or a similar device BEFORE formatting.

- Follow the steps described in step 3 and go to the settings menu.
- In the setup, use the arrow keys to navigate to the 'Format' submenu.
Confirm the selection with the OK button.
- Follow the instructions on the camera and format the SD card.

Step 6: SET UP DATE AND TIME

- Follow the steps described in step 3 and go to the settings menu.
- In the setup, use the arrow keys to navigate to the 'Date/Time' submenu.
Confirm the selection with the OK button.
- Use the arrow keys to select the correct year and confirm with the OK key.
When you confirm, the display automatically jumps to the month.
You can also set this using the arrow keys and confirm with OK; the same applies to the day and time.
- Finally, you can use the arrow keys to select a date format.
You also confirm this with OK.
The display then automatically returns to the year.
- To return to the setup, press the On/Off key.

Step 7: SET UP THE RESOLUTION

- Follow the steps described in step 3 and go to the settings menu.
- In the setup, use the arrow keys to navigate to the 'Resolutions' submenu.
Confirm the selection with the OK button.
- Now you can choose between different resolutions.
The highest resolution is at the top of the list, the lowest at the bottom.
- Use the arrow keys to select the desired resolution and confirm your selection with the OK key.

Step 8: CONNECT THE CAMERA TO YOUR SMARTPHONE

- Download and install the app recommended in the user's manual.
- Switch off the wireless network (WIFI) on your smartphone.
- Turn on the camera.
- Switch on the wireless network (WIFI) on your smartphone.
- Search the camera in the list of available WIFI networks of your smartphone.
- Connect the camera to your smartphone by entering the password.

Sometimes being close to the router, the smartphone prioritizes a connection to the router's network (of which you have the password saved), instead of connecting to the camera.

Please try to connect the camera and smartphone far from the router, or else delete the router password on your smartphone, so it doesn't prioritize the router network. Alternatively, you can also switch off the router while connecting the camera to your smartphone for the first time.

FURTHER SETTINGS

In the settings menu, you can navigate with the arrow buttons on the side of the camera and confirm the following settings with the OK button, depending on the camera model:

- | | | |
|-----------------------|------------------|--------------------|
| • Resolution | • Quality | • Image rotation |
| • Time-lapse record | • Sharpness | • TV Mode |
| • HDR | • Anti-Shaking | • TV out |
| (High Dynamic Range | • Exposure | • Screensaver |
| Image) | • White balance | • Field of view |
| • Record audio | • Color | • Fish eye adjust |
| • Slow motion | • ISO | • Aqua mode |
| • Date stamp | • Delete | • WiFi |
| • Motion detection | • Protect | • WIFI SSID |
| • Gyro RSC | • Date/Time | • WIFI Password |
| (image stabilization) | • Auto power off | • Format |
| • Image Size | • Beep sound | • Default settings |
| • Sequence | • Language | • Version |
| • Capture mode | • Frequency | |