

# GOXTREME<sup>®</sup>

## PIONEER



**4K**  
ULTRAHD

**4K**  
10FPS

**FHD**  
1080P  
30FPS

**30m**

**140°**

**2"**  
DISPLAY

**BURST**  
FUNCTION

**LOOP**  
RECORDING

**WIFI**

## RESOLUTIONS

Video	fps
4K*	10fps
1080p	30fps
720p	30fps
<b>Photo</b>	12M* / 8M* / 5M / 2M

## DISPLAY

LCD display	2.0"/5cm
-------------	----------

## FEATURES

Sensor	5MP
Waterproof case	Up to 30m
Microphone / speaker	Built-in
Wide angle	140°
Time lapse photo	2s / 3s / 5s / 10s / 20s / 30s / 60s photo intervals The photo intervals can be used as a self-timer or (after switching on the „continuous shot“) for the time lapse photo function.
Burst rate	3shots/1.5s
Self-timer	2s / 3s / 5s / 10s / 20s / 30s / 60s
Continuous shot	On / Off
Frequency	2412 - 2472 / 2412 - 2472 / 2412 - 2472 / 2422 - 2462 (MHz)
Output Power	0.00962 / 0.00705 / 0.00701 / 0.00435 (EIRP, Watts)
Modulations	802.11b / 802.11g / 802.11n(HT20) / 802.11n(HT40)
File format	AVI, JPG
Interface	HDMI, USB 2.0 Micro
Power source	Exchangable 900mAh lithium battery
Dimensions	59 x 24 x 40 mm

## EXTERNAL MEMORY (not included)

Requirements	Compatible with microSD cards up to max. 32GB U3 class10 cards required (or faster)
--------------	--

## WIFI CONNECTION

WiFi function	Built-in
WiFi frequency	2.4 GHZ
App	“GoPlus Cam” for Android or iOS

Download the app from the App Store or Google Play to control your action cam by your phone or tablet via WiFi.

Please note that it is not possible to wirelessly playback or transfer files exceeding 1080p resolution using the app. Files using any resolution higher than 1080p can only be accessed via computer. Due to certain WiFi restrictions it is not possible to transfer videos of 4K resolution.



\*by interpolation



## MOUNTS INCLUDED



Waterproof case, bike mount, frame mount with clip, long/short base, tripod adapter, monopod adapter, helmet base, long/short joint adapters, battery, straps, lens cloth, USB cable, manual (Mount shapes may vary slightly in this picture.)