



easy**p**ix®
free & easy

Recommendation for the first set up

After having charged your EasyPad as described in the manual you can start the installation:

1. Please tap the „Settings“ app button
2. Please choose your language under „Language & Input“
3. Under „Date & time“ please deactivate the „Automatic date & time“.
Then set the current date, time **and select the correct time zone**.
After that you can activate the „Automatic date & time“ function again.
4. Under „Wi-Fi“ you have to turn on the Wi-Fi reception for your tablet pc. You will see a list of all available networks.
In case your own network is missing please check the router settings. It may be that the SSID is made invisible, the router is using some different frequency (5GHz instead of the 2,4GHz standard) or it uses channel 12/13. If there are some connection problems please check the manual of the router – in most cases the router security settings have to be changed.
5. Under „Accounts & sync“ you can add a new Google account or use your existing account. By adding a new one please follow the instructions. *A Google account is necessary for downloading (apps) in the Google Market / PlayStore.*
6. Please close the „Settings“ application.
7. Please tap on the Market / PlayStore app button and tap on the installed-apps-icon  . Please download and install all updates for your existing applications first.

Now you can download some further applications. Please check also the reports of other users' experiences. The apps are not verified by Google and might be defective, which can lead to damages. In the case of hardware or software damage caused by the installation of 3rd party apps our warranty does not apply.

Please note that too many applications can make the device less efficient or reduce the battery life. If there are some unused or obsolete applications on your tablet pc you can de-install them in the „Settings“ area.

Lifestyle for all!

www.easypix.eu