


easypix®

# Urban monkey® bikeez

*Remark:*

*If you recharge the speaker by plug in an electric socket, the adapter should be 5V, 1A.*

## Product Structure and Function

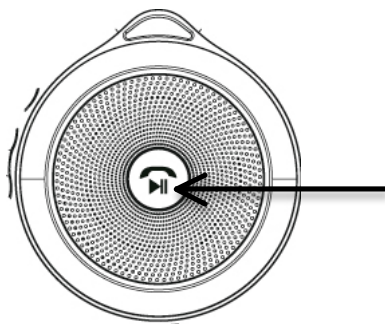

**Controlled by touch**




**Controlled by touch**

When turned on, Bluetooth mode default will appear and there will be a voice guide.



This icon will twinkle. If you press it for 2 seconds voice guide will be on and it will be turned off if you press it for another 2 seconds.

### \* **Bluetooth music mode:**


1. When Bluetooth is connected the twinkling  will stop.  
Remark: password "0000" (when needed)
2. Press once to pause/play
3. Press for longer than 2 seconds to redial the last calling

### \* **Answer call in Bluetooth mode:**

1. Press once to accept the call
2. Press for longer than 2 seconds to reject the call
3. Your music will continue after the call is ended

### \* **AUX mode:**

1. Press once to use the speaker or make it mute
2. Press longer than 2 seconds to make it invalid

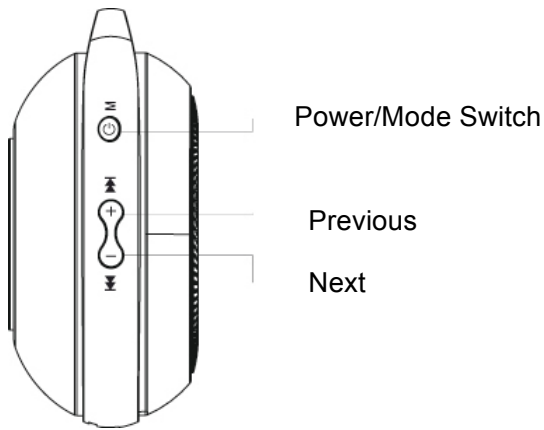

 **Power/Mode Switch**

1. In any mode situation, please press the button to change between Bluetooth/AUX
2. In any mode situation, please press longer than 2 seconds to power off

**Remark:**

1. AUX cable should be inserted into speaker. Otherwise it cannot start the AUX mode
2. After turning on the speaker the default mode is the Bluetooth mode
3. Last operation is prior

 **Previous/Next**

**Bluetooth mode:**


1. Press once to go to previous/next song
2. Press longer than 2 seconds to increase/decrease the volume

**AUX mode:**

1. Press once to make it invalid
2. Press longer than 2 seconds to decrease the volume

**Recharge indicator**

1. Charging: red
2. Full charged: off
3. Energy management: After 5 minutes without task it will enter into energy saving mode

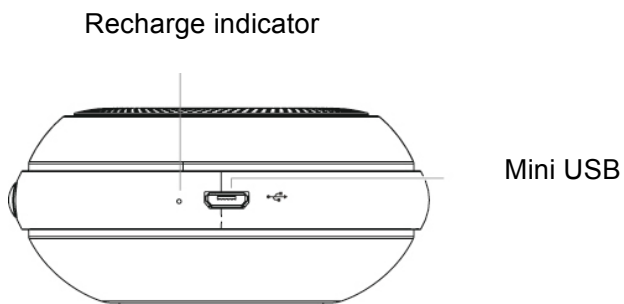

## Bluetooth function connection

- Make sure the Bluetooth function is switched ON on your devices and the battery is charged; search the Bluetooth device "BIKEEZ" and connect to it.
- Password (when needed): 0000

## Specification

Category	Item	Description
Bluetooth	Standard	Bluetooth 4.0
	Frequency	2.42-2.48 GHz
	Range	30m
	Profile	HS/HF, A2DP, AVRCP, OPP
Audio	Speaker unit	40mm
	Rated Power	3W
	Response frequency	100Hz~20KHz
	S/N	S/N≥85 dB
	RATED IMP	4 OHM
	THD	THD≤7%
Power	Type	Built-in Lion battery
	Rated Voltage	3.7V
Interface	AUX input	Mini USB
	DC-IN input	Mini USB

## Note

- Keep the speaker away from damp, dusty, reeky environment.
- Keep the speaker away from water and other liquid.  
If it occurs, please use a soft cloth to dry it.
- Don't use water or chemical liquid to clean it.  
Please use a soft cloth to clean the surface of the speakers.
- Keep this product away from high temperature.  
Roasting, baking or drying is not allowed.
- Be sure the voltage for power is  $\leq 3.5V$ .
- Keep this product away from large external forces.
- Keep the speaker away from strong magnetic fields.
- Don't open the speaker housing and repair the speaker by yourself.

## DECLARATION OF CONFORMITY

Easypix hereby declares that the product Bikeez is in conformity to all the essential requirements of Directive 1999/5/EC. The declaration of conformity can be downloaded here:

[http://www.easypix.info/download/pdf/doc\\_bikeez.pdf](http://www.easypix.info/download/pdf/doc_bikeez.pdf)

For technical help please visit our support area on [www.easypix.eu](http://www.easypix.eu).



Only EU

**easypix**<sup>®</sup>  
LIFESTYLE ELECTRONICS