

# CyberScanner Vision Compact

Digital Film & Slide Scanner



## Quick Start Guide

---

**for customers in North and South America**

**for customers in USA**

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

**Film/Slide Scanner**



Tested To Comply  
With FCC Standards

FOR HOME OR OFFICE USE

(1) This device may not cause harmful interference.

(2) This device must accept any interference received including interference that may cause undesired operation.

**for customers in Canada**

This Class B digital apparatus meets all requirements of the Canadian Interference-Causation Equipment Regulations.

**for customers in Europe**



“CE” mark indicates that this product complies with the European requirement for safety, health, environment and customer protection. “CE” mark cameras are intended for sales in Europe.

---

## **. System Requirements**

Personal computer, laptop, desktop or IBM compatible with Pentium 166 MHz minimum, and with an active USB (Universal Serial Bus) port.

Windows 2000 / XP / Vista / Windows 7, CD ROM drive, color monitor, mouse and keyboard.

## **. Package Contents**

Make sure that all of the items shown below are included.

Film Scanner

USB cable

CD-ROM for Arcsoft Software

User's Manual

TV cable

Adapter


Positive Slide Holder

Negative Film Holder

Cleaning Brush

---

## i. Name of parts

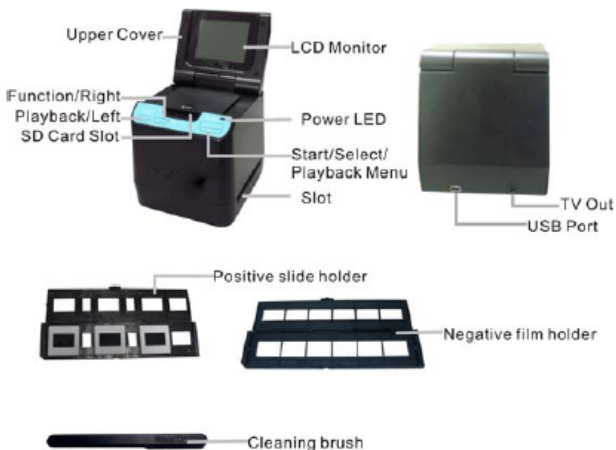

We strongly suggest using a clean, dry, non-alcohol cotton swab to insert into the film scanner slot and clean the glass surface periodically to produce a clear image.

Please make sure your film, slide and holder are clean before inserting into the scanner as well. Dust or dirt on the film, slide and holder will affect the quality of your scanned images.

## ii. How to install slides and film into the tray holder

---

. Open the film holder as illustrated



. Put a film/slide in the film/slide slot as shown.

ote: Do not flip the film/slide. If flipped, the pictures will be scanned backwards.



. Close the film/slide holder



---

## I. Insert and take out SD card ( prerequisite )

Insert SD card before scanning.

The scanner has no built-in memory, SD card is required.

Please close and then open the cover after card inserted.

**lote: This device does not support hot-plug. Inserting SD card during operation will cause the device power off.**

## I. Quick Start

Connect to the AC power source to turn on the device.

Open the upper cover and you can see the power LED light will become red.

Insert the SD card into the SD card slot.

Insert the slide or film tray into the scanner and move the tray carefully to adjust the film.

Press the Start button to capture a picture

### Power On/Off:

Power On: Open the upper cover and you can see the power LED light will become red.

Power Off: Close the upper cover.

### Select Function

Press the Function button to enter function mode.

You can see the icon on the screen.

Press the Left or Right buttons to select function.



---

Select Home




Press Start button to back to capture mode.

---


Scanning Type



To enter the Film Type, you can use the Left or Right button to select, press the Start button to confirm.

Slide:  You need select the Slide mode when you scanner the slide.

Monochrome:  You need select the Monochrome mode when you scanner the BW film.

Film:  You need select the Film mode when you scanner the color film.

Resolution



To enter the Resolution Function, you can use the Left or Right button to select, press the Start button to confirm.

800 DPI --2592 x 1680 Pixels

600 DPI – 5184 x 3360 Pixels

Format



To enter the Format, to select 'do not format' (X) or 'format' (✓), press the Start button to confirm.

Caution: Formatted files cannot be recovered.

TV Output



Connect the scanner to your TV with TV cable.

NTSC: Setting the TV Output to NTSC.

PAL: Setting the TV Output to PAL.

---

Exposure value



To enter the EV mode, press the Left or Right button to select, and press Start button to confirm. Exposure compensation helps you change the exposure setting manually to adjust object lighting. This feature helps to achieve better results when scanning a film or slide image with a strong backlight, or an image that is against a dark background.

The settings can be adjusted in 1/2 steps within the range  $-2EV \sim +2EV$ .

You can check the result of the compensation by viewing the image on the screen panel.



Mirror

Press the Left or Right buttons to select the icon on the screen, and press Start button to confirm. Press Start button to capture the picture again.

## Playback

Press the Playback button to enter playback mode, and view the scanned photos. Press Left or Right button to select the next / previous photo.

## Playback Menu

Press the Start/Playback Menu button to enter the menu mode.

You can see the icons on the screen.

Press the Left or Right buttons to select these items.






---


Single



When you select the  icon, press Start button to confirm. You need press Left or Right button to review the next / previous picture.


Slide Show



Use the Slide  feature to continue display your photos on the scanner screen panel. Once selected the Slide Show Mode, camera will automatically play all the photos. Press any button to stop the slide show.


Delete



Select the  to delete current image.


Delete All



Select the  icon will delete all the stored images from the internal memory or SD card. Files that are erased cannot be recovered. Make sure you select the image you want to delete.

Rotate 90° (Left)



Select the  icon, the current image will rotate 90° by counter clockwise direction..

Rotate 90° (Right)



Select the  icon current image will rotate 90° clockwise direction.

---

Exit



select the icon, and press Start button to confirm, then you will back the playback mode.