

---

easypix®  
DVC 529 **FOCUS** *FULL* **HD**

**USER MANUAL**

## 1. Parts of the camcorder

1: Preview button

2: Menu button

3: LCD screen

4: HDMI jack

5: Mode dial

6: Power LED

7: Shutter button

8: Charging LED

9: Up/Exposure button

10: Right button

11: OK button

12: Down/Self-timer button

13: Left button

 
 
14: USB jack

15: AV out jack

16: Delete/LED on/off button


17: Speaker

18: Zoom switch

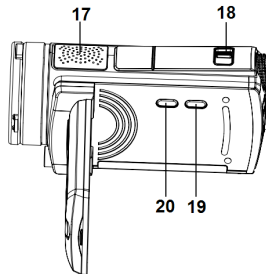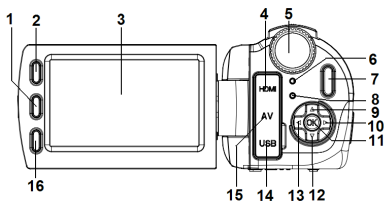

19: Display button

 20: Power button

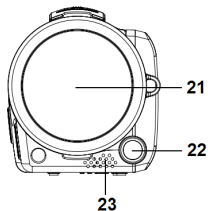


21: Lens cover

22: Compensating LED

23: Microphone

 
24: Battery cover/SD card slot

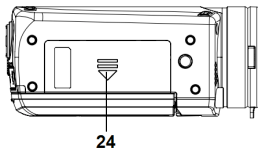

## 2. Preparing for using


### Installing the Battery

 1. Push the locker of Battery cover (1) upward to open the battery cover.
2. Place the lithium-ion battery or four AAA size batteries into the compartment. Note that the metallic contacts must be aligned with the contacts in the compartment.
3. After the battery is properly installed, replace the battery cover.

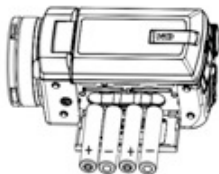

### **Inserting the Memory Card**

 This camcorder does not have an internal memory, if you want to record you have to use a SD or MMC card. Turn off the camcorder before inserting or removing the memory card. Be sure to orient the card correctly when inserting it. Never try to force the memory card into the slot when you feel resistance. The memory card has a write protect switch, which is used to protect data from accidental deletion. Therefore, whenever you want to record, format or delete files in the SD card, disable the write protection beforehand.


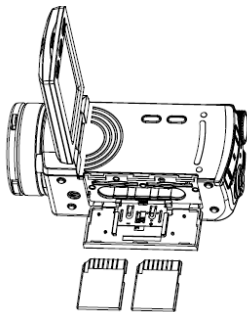


1. Turn off the camcorder.
2. Push the locker of Battery cover upward to open the battery cover.
3. Insert the memory card as illustrated.

### Monitor screen display

  
#### Capture mode [ ]

1. Camera Mode
2. Face Detect
3. Number of pictures remaining on SD Card
4. Image Size
5. Image Quality
6. SD Card Inserted
7. Battery Power Level
8. Date Display
9. Zoom Value Level
10. Time Display
11. Anti-Shake
12. ISO
13. Scene Mode
14. Capture Mode
15. White Balance
16. Exposure

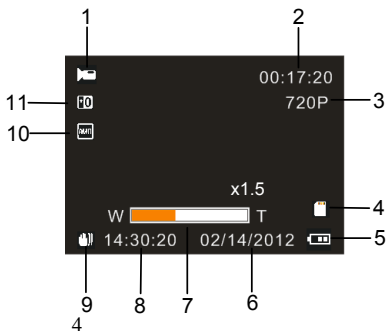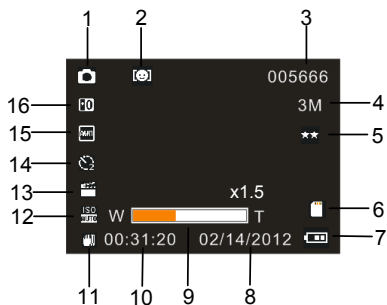


### Video record mode

 1. Video recording icon
2. Recording time available
3. Video size
4. SD Card inserted
5. Battery power level
6. Date display
7. Zoom value level
8. Time display
9. Anti-shake
10. White Balance
11. Exposure

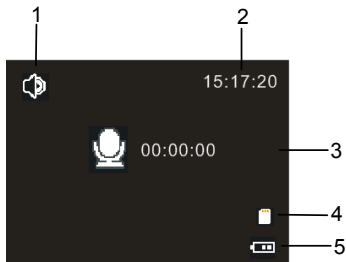

### Audio record mode

 1. Audio recording icon
2. Audio recording time remaining on SD Card
3. Recording time available
4. SD Card inserted
5. Battery power level

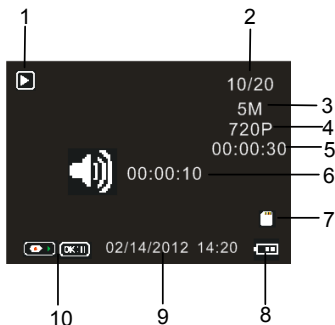

## Playback mode


1. Playback mode icon
2. Current file#/Total files on SD Card
3. Image size
4. Video size
5. Video recording time
6. Audio recording time
7. SD Card inserted
8. Battery power level
9. Date stamp
10. Press the shutter button to play or stop  
Video file, press the OK button to pause playing.

## 3. Using this camcorder


### Turning the Camcorder On and Off

1. Open the LCD screen the camcorder turns on. Or press the **POWER** button to turn on the camcorder.
2. Close the LCD screen the camcorder turns off. Or press the **POWER** button to turn the camcorder off.


### **Recording a video clip**

- 1: Turn on the camcorder and set the camcorder to video record mode()
- 2: Press the **SHUTTER** button to start recording.
- 3: Press the **SHUTTER** button again to end the recording. If the memory is full the camcorder will stop recording automatically.

### **Taking still images**

- 1: Set the camcorder to capture mode, the icon() appears on the LCD screen.
- 2: Hold the camcorder steady and then press the **SHUTTER** button down to take a picture.

### **Recording audio**

- 1: Turn on the camcorder and set the camcorder to audio record mode()
- 2: Press the **SHUTTER** button to start recording. Press the **OK** button to pause the recording and press it again to continue recording.
- 3: Press the **SHUTTER** button to end the recording. If the memory is full the camcorder will stop recording automatically.

## **4. Playback**

### **Playing back movie clips**

- 1: Press the **Preview** button to set the camcorder to playback mode.



- 2: Press the **LEFT** or **RIGHT** buttons to select the movie clips you want to playback.
- 3: Press the **SHUTTER** button to start playing. Press **OK** button to pause and press it again to continue. Press the **SHUTTER** button to stop playing.

#### **Playing back audio**

- 1: Press the **Preview** button to set the camcorder to playback mode.
- 2: Press the **LEFT** or **RIGHT** buttons to select the audio file you want to playback.
- 3: Press the **SHUTTER** button to start playing. Press **OK** button to pause and press it again to continue. Press the **SHUTTER** button to stop playing.

#### **Playback still image**

- 1: Set the camcorder to playback mode.
- 2: Press the **LEFT** or **RIGHT** buttons to preview the previous or next image.

## **5. Making connections**

### **Connecting the Camcorder to a TV**

When plug in the TV-out cable (supplied) to the camcorder AV out jack the

LCD screen turns black, Connect the camcorder to a TV and the TV screen now performs as the camcorder LCD screen.

1. Connect the camcorder to a TV via the TV-out cable (supplied) .
2. Turn on the TV and the camcorder, and then set the TV to “AV” mode.
3. When the camcorder is set to record mode, you can preview the subjects you want to record on the TV screen.
4. When the camcorder is set to Playback mode, you can review all the pictures, video and audio clips stored in the camera on the TV.

 
### **Connecting the Camcorder to a PC**

There are two ways to download files from the camcorder's internal memory or memory card to a computer:

- By inserting the memory card into a card reader
- By connecting the camera to a computer using the supplied USB cable.

### **Using a Card Reader**

1: Eject the memory card from the camcorder and insert it into a card reader that is connected to a computer.

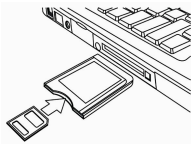

2: Open [My Computer] or [Windows Explorer] and double-click the removable disk icon that represents the memory card.

3: Copy images from the card into a directory of your choice on the

computer's hard disk.

### **Connecting the Camcorder to a PC with the USB Cable**

- 1: Connect the supplied USB cable to the computer's USB port and turn on the camcorder. A string character "Mass Storage" appears on the screen when Connection to the computer has been successfully completed.
- 2: Open [My Computer] or [Windows Explorer]. A "Removable Disk" appears in the drive list. Double-click the "Removable Disk" icon to view its contents. Files stored on the camera are located in the folder named "DCIM".
- 3: Copy the photos or files to your computer.

### **6. Technical Specifications**

Sensor	5.0MegaPixels CMOS
Display	2.7" (4:3) TFT Color LCD
Focus range	Standard: 150cm ~ infinity
Aperture	F/2.8, f=5.3mm
Shutter	Electronic Shutter: 1/2 ~ 1/2000sec.
Resolution	Still Image: [14M]: 4416x3312; [12M]: 4000x3000; [10M]:3648 x 2736;[9M]:3456 x2592; [8M]: 3264x2448;[7M]:3072 x2304;

	[5M]: 2592x1944;[3M]: 2048x1536 ; [2M]:1600x1200;[VGA]:640x480. Video: 1080P:1920x1080; 720P:1280x720; VGA: 640x480; QVGA: 320x240.
Sensitivity	ISO100/200/400/ Auto
White balance	Auto/Daylight/Cloudy/Fluorescent/Incandescent
Storage	SD (up to 32G), MMC, Support SDHC
Digital zoom	4x
Power Supply	Li-Ion Battery/ALKALINE-battery
Ambient temperature	Operating: 0° C to 40° C Storage: -20 to 60° C
Microphone	Built-in
Speaker	Built-in
Dimension	125.2 (L)X54.2 (W)X59(H)mm
Weight	Camera Body w/o battery: 200g

## DECLARATION OF CONFORMITY

Easypix hereby declares that the product DVC529 Full HD Focus is in conformity to all the essential requirements of Directive 1999/5/EC. The declaration of conformity can be downloaded here: [http://www.easypix.info/download/pdf/doc\\_dvc529.pdf](http://www.easypix.info/download/pdf/doc_dvc529.pdf)

For technical help please visit our support area on [www.easypix.eu](http://www.easypix.eu).



Only EU