



**GOXTREME® BLACK HAWK 4K**  
**ULTRA HD CAM**

## Warning

1. Always take the appropriate steps to protect your camera from falls, shock or impact.
2. Ensure a suitable distance is kept from any objects with strong magnetic interference such as electrical machinery in order to avoid strong radio waves that may be damaging to the product and affect the sound or image quality.
3. Never expose the product directly to high temperatures and prolonged strong sunlight.
4. We recommend using high quality, class10, U3 High Speed or above Micro SD Card for the best results.
5. To avoid potential data error, avoid placing your Micro SD card near strong magnetic objects.
6. In the unlikely event of overheating, unwanted smoke or unpleasant smell from the device, unplug it immediately from the power outlet to prevent hazardous fire.
7. Keep the device out of reach of children while charging.
8. The device should be stored in a dry and dust free location at normal room temperature and out of direct sunlight.
9. The product should only be charged via laptop or computer USB port.
10. Recording times are depending on resolution.
11. Battery life time - depending on settings and outdoor temperature - up to 90 min. under optimal conditions.
- 12. After reaching a max. video recording time of 29 minutes the camera will automatically stop. It can only be restarted manually.**

## GoXtreme Black Hawk 4K

Black Hawk 4K takes the GoXtreme reputation for quality to the highest level and offers the ultimate action camera experience.

Thanks to its Ambarella A12 processor, Black Hawk delivers true 4K ultra high definition videos at a silky smooth 30 frames per second with additional 2.7K, 1080p Full HD/120 fps and 720p high frame rate settings available. Featuring a 170° ultra-wide view Sony IMX117 12MP sensor, Black Hawk 4K captures stunning life-like still images at up to 16MP.


Imagination can run wild with the slow motion and time lapse modes and a wealth of customisable settings options including HDR, Colour, ISO, exposure and more offer complete control over the way you capture your images.

The built in 2" display puts framing of shots, playback of images and videos at your fingertips while built-in WiFi allows remote controlling and quick and easy downloading, viewing and sharing of files when used with any Android or iOS smartphone or tablet.

## Features

- Built-in full colour 2.0"/5cm display
- Ambarella A12 chipset
- Video recording formats: 4K, 2.7K, 2.5K, 1440P, 1080P, 960P, 720P
- 170° ultra wide-angle lens
- Up to 16MP photo resolution
- Built-in WiFi to download, view and share recorded images and photos and control camera remotely
- HDMI output
- Supports Micro SD (not included) up to 64GB maximum (class10, U3 High Speed minimum recommended)

## Camera

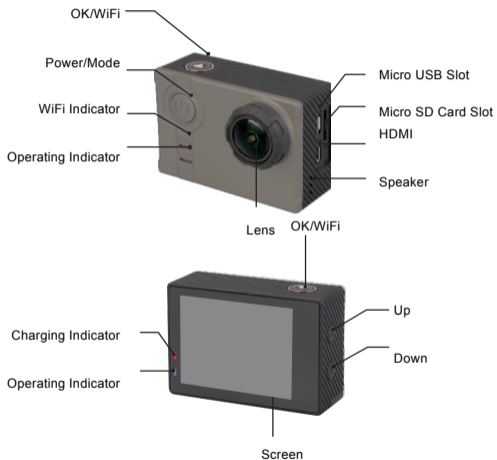



---

## Operation

### 1. Insert a Micro SD Card - up to 64GB maximum (min. Class10, U3 High Speed)

If your memory card is new or has been used previously it may need to be formatted before use.

This operation can be performed in the settings menu of the camera or on your computer.


### 2. Installing and removing battery

• The battery door is locked when the lock catch is in the "LOCK" position.

To open the battery compartment, push the lock catch to ↓, and then to ►

• Please ensure the battery is correctly installed into the battery compartment as indicated by +/- symbols and any indicators marked on the battery.

• Battery power indicator:

Full power mode 

Low power mode 

• Removing the battery: Open the battery cap and take battery out.

*Note: Please push the lock catch to the position of "LOCK" to ensure the battery is secure before using the device*

### 3. Battery Charging

• It is recommended that the camera is charged using the USB connection on your laptop or desktop computer.

• The camera can record video while charging.

• The camera will also charge when powered off.

### 4. Turning your camera on and off

Press and hold the power button for 3-5 seconds to switch the camera on/off.

## 5. Mode Switching

Switch between video recording, photo shooting, playback, menu by pressing "Power /Mode" button.

## 6. WiFi

To use the WiFi function for remote control of your camera or to download and view recorded video and images, please install the **"GoAction"** app to your smart phone or tablet PC.

This app is available in the iOS App Store and Google Play store.

Connection steps:

- After switching the camera on, press the WiFi button for 2 seconds to enable the WiFi function. (The WiFi icon will be displayed on the top right of the screen.)

After turning on the WiFi function, the camera will reset.

When the WiFi activation is complete (5 secs approx.) the WiFi icon will display as a green colour icon to confirm that the camera is now ready to be paired with your smart device.

- Open the WiFi settings screen on your smart device to search for the camera
- Select "Black Hawk" from the available wireless networks and enter the password "1234567890"
- Once your smart device has confirmed the connection open the **"GoAction"** app where a live view from your camera will be displayed.

## 7. Video Recording

Quick press the 'Power/Mode' button to select video recording mode.

Video recording mode is confirmed by a video recorder icon (  ) in the upper left corner of the screen.

Press OK to start recording – recording is confirmed by a flashing  icon.

Press "OK" again if you to stop the video recording.


## 8. Photo Shooting

Quick press the "Power/Mode" to select "Photo shooting mode",

Photo mode is confirmed by a camera icon (  ) in the upper left corner of display screen.

Press "OK" to take photos.

## 9. Burst Mode

Using the 'Power/Mode' button, select "Photo shooting mode" until the burst photo mode indicator (  ) is displayed in the upper left corner of the display.

Press "OK" to take photos.

## 10. File Storage & Playback

Using the 'Power/Mode' button select "Playback Mode" –

For video playback a  icon is displayed in the top left corner of the display.

For video preview mode a  is shown on the top left corner of the display.

Select files to view or play using the UP and DOWN arrows, then play and stop video or view your photos by pressing the 'OK' button.

You can also view and play your files when connected to your camera via the mobile app.

### NOTE:

The original specification may vary from time to time without prior notification due to product upgrading and updating.

Please use Micro SD cards up to 64GB, minimum Class10 (not included).

Recording times are dependent on resolution settings.

Battery life time - depending on settings and outdoor temperature - up to 90 min. under optimal conditions.



<b>Video Resolution</b>	4K (3840x2160) 30fps (16:9) 2.7K (2880x2160) 30fps (4:3) 2.7K (2704x2028) 30fps (4:3) 2.7K (2704x1520) 30fps (16:9) (SuperView) 2.5K (2560x1440) 60fps, 30fps (16:9) 1440p (1920x1440) 60fps, 30fps (4:3) 1080p (1920x1080) 120fps, 100fps (16:9) 1080p (1920x1080) 60fps, 30fps (16:9) (SuperView) 960p (1280x960) 120fps, 60fps, 30fps (4:3) 720p (1280x720) 240fps, 200fps, 120fps, 60fps, 30fps (16:9) 720p (1280x720) 120fps (SuperView)
<b>Video Quality</b>	Super Fine, Fine, Normal
<b>Time Lapse</b>	Off, 1 sec, 2 sec, 5 sec, 10 sec, 30 sec, 60 sec
<b>Still Image Size</b>	16M (4608x3456 4:3) 14M (4254x3264 4:3) 12M (4000x3000 4:3) 8.3M (3840x2160 16:9) 5M (2560x1920 4:3) 3M (2048x1536 4:3)
<b>Sensor</b>	12.40MP Sony iMX117
<b>Chipset</b>	Ambarella A12
<b>Photo Quality</b>	Super Fine, Fine, Normal
<b>Self Timer</b>	Off, 3 sec, 5 sec, 10 sec, 30 sec, 60 sec
<b>Continuous Shot</b>	Off, every 3 sec, every 5 sec, every 10 sec, every 30 sec, every 60 sec
<b>Burst Rate</b>	Off, 3p/s
<b>LCD Display</b>	2.0" /5cm
<b>Focusing</b>	Fixed

---

<b>Lens</b>	f= 3mm, 170° wide angle
<b>Exposure</b>	Control: Programmed AE Compensation: -0.3 / 0.0 / +0.3 / +0.7 / +1.0 / +1.3 / +1.7 / +2.0 ISO Auto, 100, 200, 400, 800, 1600
<b>Operation Temperature</b>	-10°C ~ 45°C
<b>Storage Temperature</b>	-20°C ~ 65°C
<b>Relative humidity</b>	90% max.
<b>White Balance</b>	Auto / Cloudy / Daylight / Incandescent / Underwater / Outdoor
<b>External memory</b>	Micro SDHC Cards up to 64GB (min. Class10, U3 High Speed)
<b>Battery</b>	1050mAh (exchangable)
<b>Dimensions</b>	61x42x23mm
<b>System requirements</b>	Minimum Pentium 4 3.2GHz processor Windows XP (Service Pack 2) or later Minimum 1GB System RAM Minimum 256MB RAM Video Card USB port 1024x768 pixels, 32-bit color display monitor

**DECLARATION OF CONFORMITY**

Easypix hereby declares that the product GoXtreme Black Hawk 4K is in conformity to all the essential requirements of Directive 1999/5/EC. The declaration of conformity can be downloaded here:

[http://www.easypix.info/download/pdf/doc\\_goxtreme\\_blackhawk.pdf](http://www.easypix.info/download/pdf/doc_goxtreme_blackhawk.pdf)

For technical help please visit our support area on [www.easypix.eu](http://www.easypix.eu).



Only EU

**easypix**<sup>®</sup>  
LIFESTYLE ELECTRONICS