

GOX TREME[®]

PIONEER



USER MANUAL

(Translation of the original)

- FR :** Un manuel dans votre langue est disponible sur Internet:
- IT:** Il manuale nella sua lingua può essere trovato su Internet:
- ES:** Puede encontrar un manual en su idioma en Internet:
- PT:** Um manual em seu idioma pode ser encontrado na Internet:
- PL:** Instrukcję w swoim języku możesz znaleźć na stronie:
- SWE:** En handbok på ditt språk finns på Internet:
- NL:** Een handleiding in uw taal vindt u op internet:

<https://bit.ly/3siEtp8>

www.easypix.info/download-manuals/download/goxtreme-pioneer

Table of contents

General information.....	3
Explanation of symbols	3
Product description.....	4
Intended use.....	4
Restrictions	5
Safety Instructions	6
Operating environment.....	7
Camera description.....	8
First use	9
Step 1: Insert and charge the battery.....	9
Step 2: Turn on/off the camera	10
Step 3: Insert and format the MicroSD card	10
Step 4: Switching between modes	11
Step 5: Changing the video/photo settings	11
Camera settings	12
Connection to the "GoPlus Cam" app	13
Technical specifications.....	16
Box contents	17
Disposal	18
Declaration of conformity	19

Disclaimer

Easypix makes no representations or warranties with respect to this manual and, to the extent permitted by law, expressly limits its liability for breach of any warranty that may arise from replacement of this manual by another. Furthermore, Easypix reserves the right to revise this publication at any time without obligation to notify any person of the revision.

Easypix is not responsible or liable for the misuse of the information contained herein. If you have suggestions for improvement or changes or if you have found errors in this publication, please let us know.

All relevant state, regional and local safety regulations must be observed when installing and using this product. For safety reasons and to ensure compliance with the documented system data, only the manufacturer may carry out repairs on components.

Failure to observe this information may result in personal injury or equipment damage.

Copyright © Easypix GmbH

All rights reserved. No part of this publication may be reproduced, distributed or transmitted in any form or by any means, including photocopying, recording or other electronic or mechanical means, without the prior written permission of the publisher. For permission requests, please contact the publisher in writing.

Easypix GmbH, Em Parkveedel 11, 50733 Cologne, Germany.

support@easypix.com - www.easypix.com

General information

Please read this manual and its safety instructions before using this product. Follow all instructions. This will prevent hazards that could result in property damage and/or serious injury.

The product may only be used by persons who have fully read and understood the contents of this user manual. Make sure that each person using the product has read and follows these warnings and instructions.

Keep all safety information and instructions for future reference and pass them on to subsequent users of the product.

The manufacturer is not liable for damage to property or personal injury resulting from incorrect handling or failure to observe the safety instructions.

Explanation of symbols



WARNING

"Warning" indicates a hazard with a risk which, if not avoided, may result in injury.

NOTE!

"Note" indicates information that is considered important but is not hazard-related.

Product description

GoXtreme Pioneer is an action cam. The camera records videos and photos with a wide angle of 140°. The 2"/5cm screen allows you to operate the camera easily and intuitively. It is supplied with a housing that is waterproof up to 30m, as well as a wide range of additional brackets and accessories.

Intended use

This product is suitable for use during various sports or activities. The supplied brackets allow the camera to be mounted in multiple positions: on a bicycle, helmet or on the body.

Restrictions



WARNING

The product is not suitable for children under 3 years of age. Contains small parts. Risk of suffocation.



WARNING

**The product is not waterproof.
It should only be immersed under water when securely enclosed in the supplied housing.**

- Before using the product in water, make sure that all covers and latches on the camera and underwater housing are securely closed and sealed.
- After use in salty or chlorinated water, clean the housing under tap water and allow it to dry.
- After use under water, the housing must be left open to dry in order to prevent condensation or rust formation.

Safety Instructions



WARNING

This product is only suitable for the purpose described.

The manufacturer is not liable for damage caused by improper use.



WARNING

Please read these operating instructions carefully before use.


- Always protect your camera from falls, bumps and shocks.
- Keep a sufficient distance from objects that generate strong magnetic fields or radio waves to prevent them from damaging the product or affecting the sound and picture quality.
- In the unlikely event of overheating, smoke or unpleasant odours coming from the unit, disconnect it immediately from the charging cable and remove the battery to avoid fire.
- Please do not disassemble the product. Doing so will void any warranty.
- Please dispose of the waste and residues at the

end of the product's life in accordance with local laws and regulations.

Operating environment

- To avoid condensation inside the housing or behind the lens, the product should not be exposed to large differences in temperature and humidity.
- Store the product in a cool place (at room temperature) in a dry and dust-free environment and never expose it to high temperatures or prolonged exposure to direct sunlight.
- Protect the product from falls, bumps and knocks.

Camera description

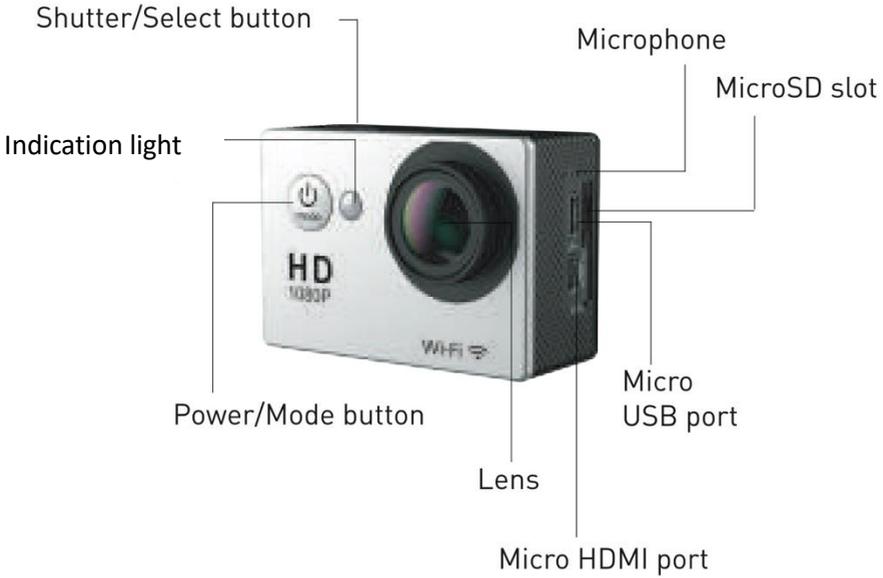

First use

NOTE!

To ensure optimum performance from your camera, please follow the steps below when using the camera for the first time:

Step 1: Insert and charge the battery

Before using the product for the first time, make sure that it is fully charged.

- Open the battery compartment cover, insert the battery and charge it for between 5 and 6 hours.
- Keep the device away from children during charging.
- Ensure that the camera is turned off during charging.
- If the camera switches on automatically when connected to a power source, please turn it off to ensure the battery can be fully charged.
- Product should only be charged via the USB port of a computer or USB power supply with a maximum output of 1000mAh.
- Disconnect the USB cable connected to the product before using it.
- The battery life is up to 90 minutes under optimal conditions and is dependent on the settings used and the outside temperature.

Step 2: Turn on/off the camera

- Press and hold the Power button for about 3 seconds to turn on the camera.
- To turn off the camera, press and hold the Power button again for about 3 seconds.

Step 3: Insert and format the MicroSD card

NOTE!

- **Please make sure that your memory card is formatted in the camera before using the card for the first time.**
- For best results, we recommend the use of high-quality Class 10 MicroSD cards with U3 High Speed or higher.
Ensure a U3 speed memory card is always used when recording 4K video. Using a lower speed card may cause data transfer speed problems due to the large file size that a 4K video produces.
- The recording time depends on the selected resolution.
- A MicroSD card is not supplied with this product.

ATTENTION!

Formatting deletes all files on the card.

Format the MicroSD card:

Insert your card into the camera and select the item "Format" in the settings to confirm the formatting of the card.

Step 4: Switching between modes

Press the mode button several times to switch between modes. In the upper corner of the screen you can see which mode the camera is currently in.

Step 5: Changing the video/photo settings

To change the settings of the camera, enter the settings mode. To do this, press the mode button several times until a tool icon appears. Confirm with the shutter release button.

Select the line you want to change and confirm with the shutter button.

Camera settings

SERIES PHOTO

To take a continuous photo, make sure that the camera is in continuous photo mode. If the Continuous Photo icon is not displayed on the screen, press the Power/Mode button repeatedly until it is displayed. In Continuous Photo mode, your camera takes 3 photos in 1.5 seconds.

Take a continuous photo:

Press the shutter/select button.

TIME LAPSE

To take a time-lapse series, make sure that Continuous Shooting is ON and the camera is in time-lapse mode. If the Time Lapse icon is not displayed on the screen, press the Power/Mode button repeatedly until it is displayed. In time-lapse mode, your camera will take a series of photos at intervals of 2, 3, 5, 10, 20, 30 or 60 seconds. The intervals must first be set in the settings before the photos can be taken in time-lapse mode.

Record time-lapse:

Press the shutter/select button. The camera will start a countdown and emit the shutter sound each time a photo is taken.

PLAYBACK

Playback video and photo:

Press mode button to switch to Playback Mode.

Press “UP” & “DOWN” key to switch between the files and press the shutter button to select a file.

To exit the Playback Mode, press mode button again.

Connection to the "GoPlus Cam" app

1. Before using the WiFi feature, please go to the App Store or GooglePlay and install the “GoPlus Cam” app on your smartphone or tablet PC.



ANDROID



iOS

2. Press the power/mode button to turn the camera on.
3. Make sure the camera is in video mode.
4. Press the Down/WiFi button to activate WiFi.
- 5.

5. Connect to the network "Pioneer_XXXXX" in the WiFi settings of your smartphone. 6.
6. Enter the password "1234567890".
7. Open the app on your smartphone.

NOTE!

- Ensure that you have downloaded the correct app.
- Please note that wireless transmission of files via the app is not possible for videos with a resolution of more than 1080p. Files with a resolution greater than 1080p can only be transferred using a computer or card reader.
- When you have finished using the app, please deactivate the WiFi function to save the battery.

Turn off the WiFi function:

Press and hold the Down/WiFi button for three seconds to turn WiFi off.

- If using your camera and smartphone near a WiFi router regularly used by you, your smartphone will often connect automatically to the router network as

a priority (as your smartphone will have saved the router password) rather than to the camera.

In this case please try to connect the camera to your smartphone while maintaining a distance further away from the router so that it does not connect to the router network.

Technical specifications

Video resolution	4K* @10fps 1080p@30fps 720@30fps
Photo resolution	12M* / 8M* / 5M / 2M *interpolated
Display	2.0"/5cm
Sensor	5MP
Waterproof housing	Waterproof up to 30m
Microphone/Speaker	Integrated
Wide angle	140°
Time-lapse photo	2s / 3s / 5s / 10s / 20s / 30s / 60s Photo intervals
Series pictures	3 pictures / 1.5s
Self-timer	2s / 3s / 5s / 10s / 20s / 30s / 60s
WiFi function	Integrated
WiFi frequency	2.4 GHZ
File formats	MOV, JPG
Interface	HDMI, USB 2.0 Micro
Battery	Exchangeable 900mAh Li-Ion battery
Dimensions	59 x 24 x 40 mm

External memory	<ul style="list-style-type: none"> - Support of MicroSD cards up to max. 32GB - Requirement: U3 class10 cards or higher - Card not included
------------------------	--

Box contents

- Camera
- Waterproof housing
- Orientation adaptors
- Tripod adapter
- Monopod adapter
- Clip Mount
- Bicycle mount
- Helmet mount
- Frame Mount
- Battery
- USB cable
- Manual EN/DE

Operating instructions in other languages are available for download at <https://bit.ly/3siEtp8> or

www.easypix.info/download-manuals/download/goxtreme-pioneer

NOTE!



Devices marked with this symbol must not be disposed of with household waste! You are

legally obliged to dispose of old appliances as well as batteries and accumulators separately from household waste. Information on collection points that accept used devices/batteries free of charge is available from your local authority or town council.

Disposal



Disposal of packaging:

Dispose of the packaging according to its type.

Add cardboard and paperboard to the waste paper, foils and plastic wrapping to the recyclable waste collection.



Waste electrical and electronic equipment and/or batteries disposed of by users in private households in the European Union:

This symbol on the product or on its packaging indicates that it cannot be disposed of with household waste. You must dispose of your old appliance and/or battery by handing it over to the applicable collection system for the recycling of electrical and electronic equipment and/or batteries. For more information on recycling this device and/or battery, contact your local council, the shop where you purchased the device or your household waste disposal service. Recycling materials helps to conserve natural resources and ensures that it is recycled in a way that protects human health and the environment.



WARNING

Warning regarding the battery:

- Do not disassemble or hit the battery. Be careful not to short-circuit the battery. Do not expose the battery to high temperatures. Do not continue using the battery if it leaks or expands.

- Always recharge using the camera or manufacturer approved desktop charger if available. If the battery is replaced by an incorrect type, there is a risk of explosion.
 - Keep the battery away from children.
 - Batteries can explode if exposed to an open fire.
- Never throw batteries into fire.
- Dispose of used batteries according to local regulations.
 - Before disposing of the device, remove the battery and dispose of it separately.

Declaration of conformity

We hereby declare that the CE marking has been affixed to this product in accordance with the essential requirements and relevant provisions of the European directives.

The complete declaration of conformity can be downloaded here:
www.easypix.info/download/pdf/doc_goxtreme_pioneer.pdf

EASYPPIX | LIFESTYLE
ELECTRONICS



Made in China