

NOTE

After reaching a max. video recording time of 29 minutes the camera will automatically stop. It can only be restarted manually.

Before using your camera in the water please verify that all lids and locks are tightly closed and sealed on the camera and the underwater case.

After use, clean the housing of salt and chlorine water and then let it dry.

The camera should not be exposed to large temperature and humidity differences to avoid condensation inside the housing or behind the lens. After underwater use, the case must be kept open to avoid condensation or rust.

DECLARATION OF CONFORMITY

easypix hereby declares that the product GoXtreme Rallye is in conformity to all the essential requirements of Directive 1999/5/EC.

The declaration of conformity can be downloaded here:

http://www.easypix.info/download/pdf/doc_goxtreme_rallye.pdf

For technical help please visit our support area on www.easypix.eu.



Only EU

easypix[®]
LIFESTYLE ELECTRONICS

GOXTREME[®]
ACTION CAMS
RIDE THE ELEMENTS

GOXTREME[®]
RALLYE

720P HD ACTION CAM



2-inch
LCD



120°
Wide Angle
Lens



1280*720



Waterproof
to 30m



 
1.5 Hours

USER'S MANUAL

THE BASICS





WATERPROOF HOUSING

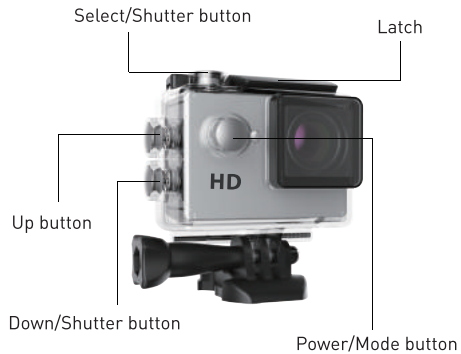

MOUNTING YOUR CAMERA

  Attach your camera to helmets, gear and equipment.

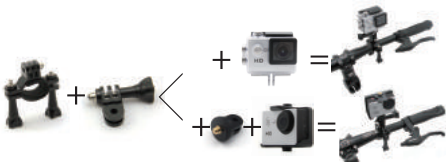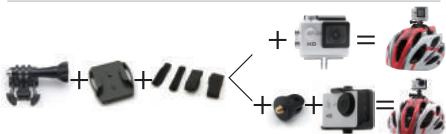

GETTING STARTED

 
Turn the camera on and repeatedly press the Power/Mode button to cycle through camera modes.

RECORD VIDEO




720p 30fps/VGA 30fps

PLAYBACK



View your videos and photos on the screen.

 SETTINGS



Video Settings,
Photo Settings and System
Settings

Repeatedly press the Shutter/Select button to cycle through three settings.

Use the Up or Down button to cycle through the setting options and press Shutter/Select to select desired option.

VIDEO SETTINGS



- 1) Movie Size:
HD 720p 30fps /
480p (640x480) 30fps

| MicroSD Card | 720p 30fps | 480p 30fps |
|--------------|------------|------------|
| 32 GB | 320 mins | 480 mins |
| 16 GB | 160 mins | 240 mins |
| 8 GB | 80 mins | 120 mins |

- 2) Date Stamp: Off/Date & Time

- 3) Exposure:

+ -2.0/+ -1.7/+ -1.3/+ -1.0/+ -0.7/+ -0.3/0

After reaching a max. video recording time of 29 minutes the camera will automatically stop.

It can only be restarted manually.

PHOTO SETTINGS



- 1) Resolution: 5M/3M/2M/1M
- 2) Single Shot: Off/On
- 3) Burst Photo: Off/On
- 4) Time Lapse: Off/2s/10s
- 5) Continuous Lapse:
Off, 2, 3, 5, 10, 20, 30 or 60 second intervals

SYSTEM SETTINGS



- 1) Sounds: On/Off, Start-up 1/2/3/None, Beep On/Off, Volume 0/1/2/3
- 2) Power Frequency: 50Hz/60Hz
- 3) Panel Protect (Screen Saver):
30sec/1 min/3 min/5 min
- 4) Power Save: Off/1 min/3 min/5 min

- 5) Date & Time: YYYY/MM/DD, DD/MM/YYYY, MM/DD/YYYY
- 6) Language: English, German, Italian, Spanish, Portuguese, Dutch, France, Czech, Polish, Turkish, Russian, Japanese, Korean, Thai, Traditional Chinese
- 7) Format: No/Yes
- 8) Reset All: No/Yes
- 9) Version

CAPTURING VIDEO + PHOTOS

Press the Shutter/Select button to start/stop recording.

Press the Down/Shutter button to take a picture.

You can also change video and photo settings in the settings menu.

STORAGE/MICRO SD CARDS

This camera is compatible with 8GB, 16GB and 32GB capacity microSD, microSDHC and microSDXC memory cards.

You must use a microSD card with a Class10 speed rating.

We recommend using brand name memory cards for maximum reliability in high-vibration activities.

CHARGING THE BATTERY

If recording is occurring when battery reaches 0%, the camera will save the file and power OFF.

To charge the battery:

1. Connect the camera to a computer or USB power supply.
2. The charging status light remains ON while the battery is charging.
3. The charging status light will turn OFF when the battery is fully charged.

Charging time: about 4 hours