



Quick Start Guide

Top and Front view

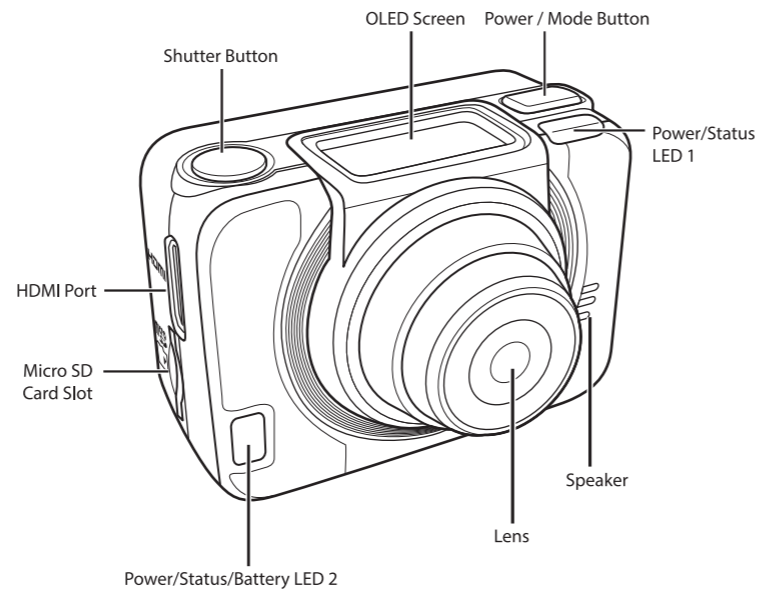


| LED | Color | Description |
|--------------------|----------------------|--|
| Power / Status LED | Green | During startup |
| | Green Blinking | Taking photos / WiFi initial setup is complete and connection is in progress |
| | Red Blinking | Video recording in progress |
| | Red Blinking Rapidly | Self-timer |
| Battery LED | Red Blinking | Battery is charging |
| | Off | Full charge |

Back and Bottom View

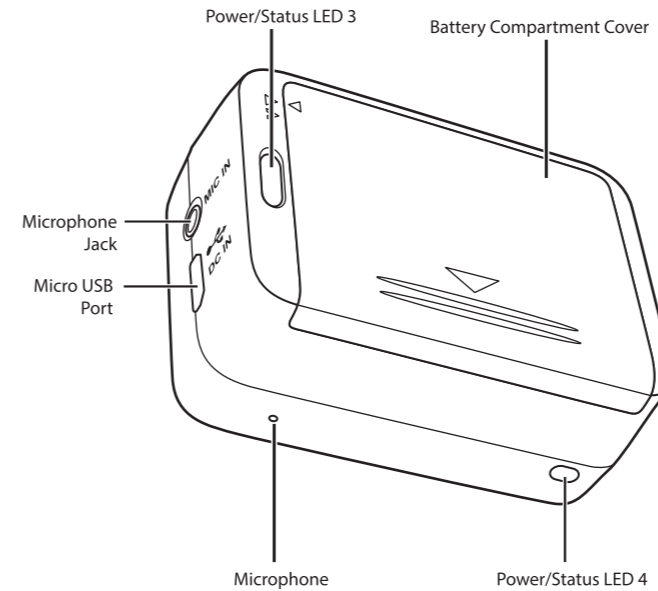

The OLED Screen

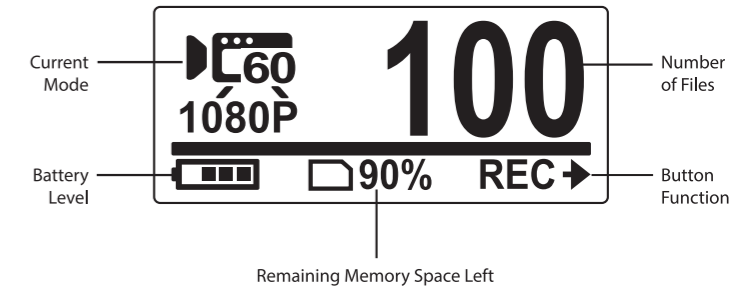

| Mode | |
|------------|-----------------|
| Video Mode | Time Lapse mode |
| Photo Mode | Self-timer Mode |
| WiFi Mode | Setting Mode |
| Burst Mode | |

| Button Function | |
|-----------------|---------------|
| Record video | Capture photo |


Turn On Camera

Press the **Power** button to turn on the camera.






Changing Modes

Press the **Mode** button repeatedly to switch modes.

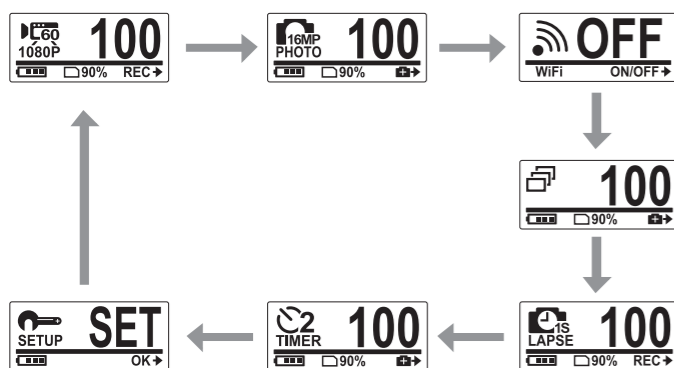

Set Date and Time

   - Press the **Mode** button repeatedly to change to **SET** mode.
- Press the **Shutter** button to enter **SET** mode.
- Press the **Mode** button to highlight **MORE**.
- Press the **Shutter** button to enter the **MORE** menu.
- Press the **Mode** button to highlight **TIME**.
- Press the **Shutter** button to enter the **TIME** submenu. The Year field is highlighted.
- Press the **Shutter** button repeatedly to adjust the year.
- When done, press the **Mode** button to go to the month field.
- Press the **Shutter** button repeatedly to adjust the month, and then press the **Mode** button to go to the day field.
- Press the **Shutter** button repeatedly to adjust the day, and then press the **Mode** button to go to the hour field.
- Press the **Shutter** button repeatedly to adjust the hour, and then press the **Mode** button to go to the minute field.




- Press the **Shutter** button repeatedly to adjust the minute, and then press the **Mode** button to highlight **OK**.
- Press the **Shutter** button to complete the setting.
- To exit the menu, press the **Mode** button repeatedly until the **EXIT** screen appears.
- Press the **Shutter** button to exit the **SET** mode.



Record Videos

 
- By default, the camera is automatically in **Video** mode when turned on.
- Press the **Shutter** button to start recording.
- Press the **Shutter** button to stop recording.



After reaching a max. video recording time of 29 minutes the camera will automatically stop. It can only be restarted manually.

Shoot Photos

 - Press the **Mode** button to switch to **Photo** mode.
- Press the **Shutter** button to take a photo.



Shoot Photos By Burst Mode

Shoot photos by burst mode to take 7 photos with one press of the **Shutter** button.

- Press the **Mode** button repeatedly to switch to **Burst** mode.
- Press the **Shutter** button to take photos.



Shoot Photos By Self-timer Mode

Shoot photos by self-timer mode to take a photo after a short delay.

- Press the **Mode** button repeatedly to change to **Self-timer** mode.
- Press the **Shutter** button. The photo is captured after 10 or 2 seconds.



Shoot Photos By Time Lapse Mode

This feature allows you to continuously capture photos with one press of the Shutter button at the preset interval time (1/3/5/10/30/60 seconds). Shooting only stops when the Shutter button is pressed again.

You can use this feature to record videos such as evolution of a construction project, weather changes, or flower blossom.

 
For Video lapse function, those continuous shots are combined and saved into one video automatically. The recorded video is played back in fast motion (faster than the normal playback speed).

For Photo lapse function, it will continuously capture 16M photos and you need to use a third party software to create a video clip.

1. Press the **Mode** button repeatedly to switch to **Time Lapse** mode.
2. Press the **Shutter** button to start taking photos.




3. Press the **Shutter** button again to stop taking photos.




View Videos/Photos

Connect your camera to a PC or TV to view captured photos and videos.

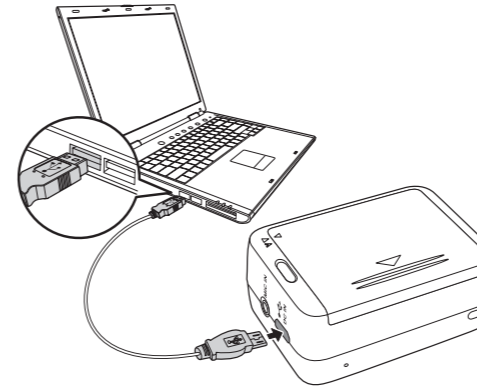

Note: Use USB cable for PC.

or

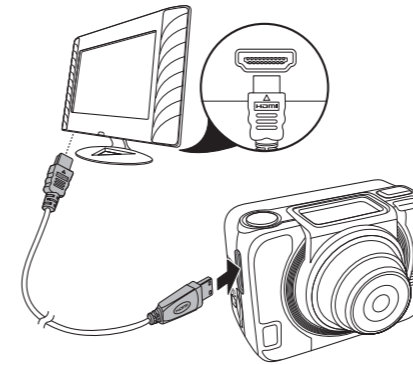

Note: Use HDMI cable for TV. HDMI cable is an optional item.

View Videos/Photos on Smartphones

Connect your camera to a smartphone using Wi-Fi connection to view or record videos/photos from your camera on your smartphone.

Note: Before using this feature, download the **ActionCam!** app from AppStore (iOS) or Google Play (Android OS) on your smartphone.

1. Press the **Mode** button repeatedly to switch to **WiFi** mode.



2. Press the **Shutter** button to toggle WiFi to **ON**.



3. Press the **Mode** button to exit the **WiFi** mode screen.

4. Wait for 30 seconds until the LED flashes to indicate Wi-Fi connection is established.

5. On your smartphone, enable Wi-Fi connection, then search and connect to the Wi-Fi network **ActionCam_XXXXXX**.


6. When prompted, enter the password "1234567890".

7. Use the **ActionCam!** app to view videos and photos from your camera.


How to Use the Accessories

Waterproof Case


1. Release the case lock and flip it open.

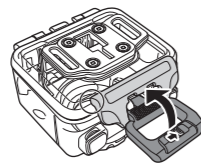

2. Install the camera inside the case.

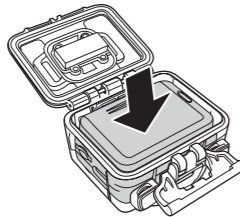


3. Secure the case lock.

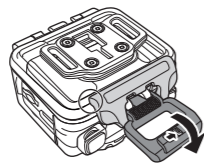


T Tip Adapter

Depending on the accessories that you will use, detach or attach the T tip for use with the accessory of your choice.

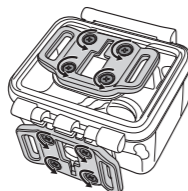


Housing Back Door

1. Open the back door completely.
2. Pull to detach the back door from the case.
3. Install the T tip adapter to the back door you want to use.
4. Re-install the back door.

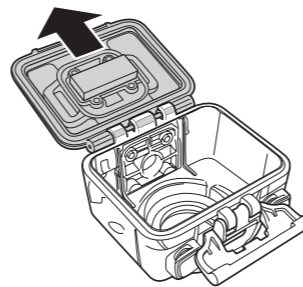

Velcro Strap

You can insert the Velcro strap through the strap holes of the T tip adapter.

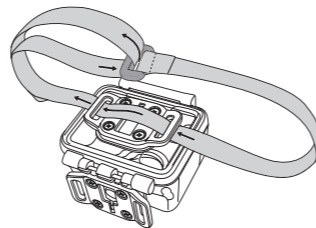


Other Accessories

Lock the T tip adapter to the T tip of the accessories you wish to use.

Tips on attaching adhesive mounts

- Apply to clean surfaces - wax, dust, and oily essence free.
- Attach the mount at room temperature.
- Mount only on smooth surfaces. To obtain optimum adhesion, firmly press into place when installing the mount.
- It is highly recommended to attach the mount a minimum of 24 hours before its initial usage.

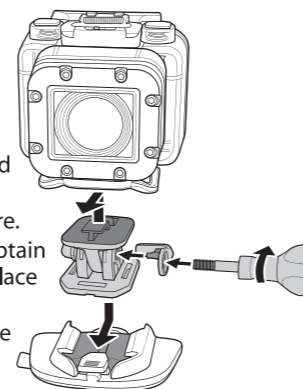


RF Watch Remote Control


1. Press the **Mode** button repeatedly to change to **SET** mode.
2. Press the **Shutter** button to enter **SET** mode.



 
3. Press the **Mode** button to highlight **MORE**.
4. Press the **Shutter** button to enter the **MORE** menu.



 
5. Press the **Mode** button to highlight **BINDING**.
6. Press the **Shutter** button to enter the **BINDING** submenu. The camera RF antenna is enabled and ready for pairing.



7. On your RF watch remote control, press the **MODE** button to switch to **Preview** mode. Then press and hold the **SET** button to enter to **SET** mode.

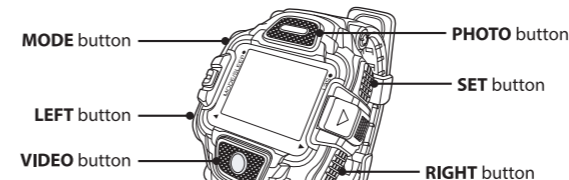

8. Use the **LEFT** or **RIGHT** button to select **Pairing** and press the **VIDEO** button to enter **Pairing** menu.
9. Use the **LEFT** or **RIGHT** button to select the preview window that you want to pair with your camera and press the **VIDEO** button to start pairing.

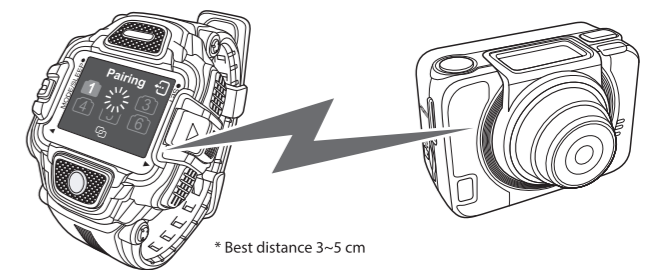

10. When pairing is complete, press the **SET** button to return to **SET** mode. Then press the **SET** button to switch to **Preview** mode.
11. Press the **VIDEO** button on your RF watch remote control to start and stop video recording. To take photos, press the **PHOTO** button.

Please use microSD cards up to 32GB, minimum Class6 (not included). Recording times are depending on resolution.

Before using your camera in the water please verify that all lids and locks are tightly closed and sealed on the camera and the underwater case. After use, clean the housing of salt and chlorine water and then let it dry. The camera should not be exposed to large temperature and humidity differences to avoid condensation inside the housing or behind the lens. After underwater use, the case must be kept open to avoid condensation or rust.

DECLARATION OF CONFORMITY
easypix hereby declares that the product GoXtreme WiFi Pro is in conformity to all the essential requirements of Directive 1999/5/EC. The declaration of conformity can be downloaded here:
http://www.easypix.info/download/pdf/doc_goxtreme_wifi_pro.pdf
For technical help please visit our support area on www.easypix.eu.