

easypix®

# MAGIC


## LCD BOARD

**User manual**


## Maintenance

- Cleaning: Please clean gently with soft cloth
- Storage temperature:  $-10^{\circ}\text{C}$ - $60^{\circ}\text{C}$
- Operating temperature:  $10^{\circ}\text{C}$ - $40^{\circ}\text{C}$



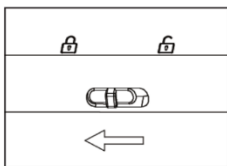

Turn off Erase Lock

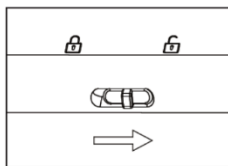


Turn on Erase Lock

## Attention:

The Erase Lock is off in default.

1. When Erase Lock is off, the Erase Button is disabled.
2. When Erase Lock is on, the Erase Button is available.

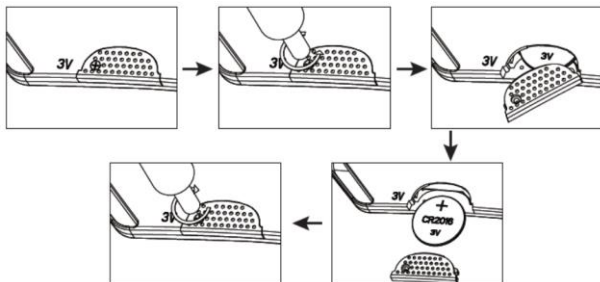

## Battery Replacement:

1. Remove screw.
2. Pull out battery case.
3. Replace the battery. (Requires one CR2016[3V] battery.)
4. Insert battery case into the board.
5. Re-tighten screw.


## Attention

To achieve better writing experience and to avoid scratching the screen, please use the matching stylus.



### **Warning:**

- Please do not press too hard or write with sharp objects that could damage the screen.
- This product cannot transfer data or images to or from any other device.
- Keep the product away from moisture and do not submerge it in water.
- Avoid continuous exposure to sunlight.

 **Warning: Small parts included, not suitable for kids under 3 years old.**

 **Warning: Do not disassemble the product.**

## DECLARATION OF CONFORMITY

We hereby declare that the CE marking has been affixed to this product in accordance with the essential requirements and relevant provisions of the European directives.

The declaration of conformity can be downloaded here:

[http://www.easypix.info/download/pdf/doc\\_magic\\_lcd.pdf](http://www.easypix.info/download/pdf/doc_magic_lcd.pdf)

For technical help please visit our support area on [www.easypix.eu](http://www.easypix.eu).



Only EU

**easypix**<sup>®</sup>  
LIFESTYLE ELECTRONICS