

SAFETY INSTRUCTIONS

⚠ WARNING: The camera is not suitable for children under 36 months because of choking hazard.

⚠ WARNING: Always protect your camera from falls, blows and bumps.

- Keep a sufficient distance from objects that generate strong magnetic fields or radio waves, such as electrical appliances to prevent them from damaging the product or affecting the sound and image quality.
- Store the device cool (at room temperature) in a dry and dust-free location and never expose the product to high temperatures or permanently direct sunlight.
- In the unlikely event of overheating, smokes or unpleasant odors coming out of the unit, disconnect it immediately from the charging cable and remove the battery to avoid a fire.

 
⚠ WARNING: Before using the camera in the water, make sure that all lids and closures on the camera and underwater housing are closed and sealed.

- After using it in salty or chlorinated water, clean the case and let it dry.
- The camera should not be exposed to high temperature and humidity differences to prevent condensation inside the case or behind the lens.
- After under water use, the housing must be left open to avoid condensation or rusting.


Panox[®]
mx200
ACTION CAM

USER'S MANUAL

THE BASICS

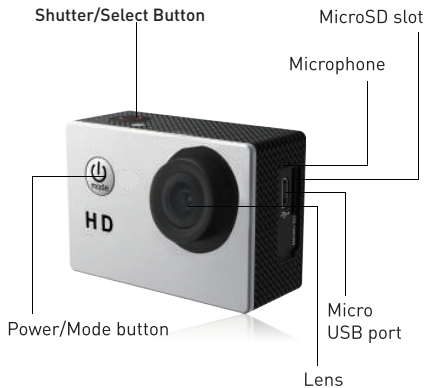

WATERPROOF HOUSING

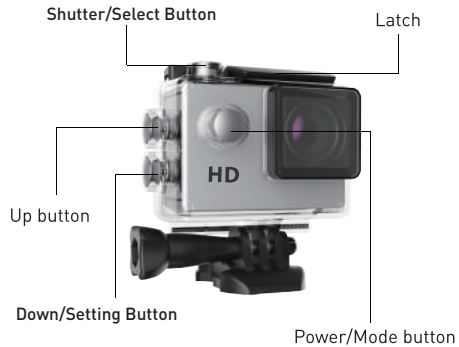 

MOUNTING YOUR CAMERA

Attach your camera to helmets, gear and equipment.



GETTING STARTED

 
Turn the camera on and repeatedly press the Power/Mode button to cycle through camera modes.

RECORD VIDEO




720p 30fps (by interpolation)
VGA 30fps

PLAYBACK



View your videos and photos
on the screen.

 SETTINGS



Press the “down” button
to go into setting menu:
Video Settings,
Photo Settings and System
Settings

Repeatedly press the Shutter/Select button to cycle through three settings.

Use the Up or Down button to cycle through the setting options and press Shutter/Select to select desired option.

VIDEO SETTINGS



- 1) HD 720p* 30fps (*by interpolation)
480p (640x480) 30fps

MicroSD Card	720p 30fps	480p 30fps
32 GB	320 mins	480 mins
16 GB	160 mins	240 mins
8 GB	80 mins	120 mins

2) Date Stamp: Off/Date & Time

3) Exposure:

+/-2.0/+/-1.7/+/-1.3/+/-1.0/+/-0.7/+/-0.3/0

After reaching a max. video recording time of 29 minutes the camera will automatically stop.

It can only be restarted manually.

PHOTO SETTINGS



- 1) Resolution: 5M*/3M*/2M*/1M*/VGA (*by interpolation)
- 2) Single Shot: Off/On
- 3) Burst Photo: Off/On
- 4) Time Lapse: Off/2s/10s

SYSTEM SETTINGS



1) Sounds: On/Off, Start-up 1/2/3/None, Beep On/Off, Volume 0/1/2/3

2) Power Frequency: 50Hz/60Hz

3) Panel Protect (Screen Saver):
30sec/1 min/3 min/5 min

4) Power Save: Off/1 min/3 min/5 min

- 5) Date & Time: YYYY/MM/DD, DD/MM/YYYY,
MM/DD/YYYY
- 6) Language: English, German, Italian, Spanish,
Portuguese, Dutch, France, Czech, Polish, Turkish,
Russian, Japanese, Korean, Thai, Traditional Chinese
- 7) Format: No/Yes
- 8) Reset All: No/Yes
- 9) Version

CAPTURING VIDEO + PHOTOS

Press the Shutter/Select button to start/stop recording.

Press Shutter button to take a picture.

STORAGE/MICRO SD CARDS

This camera is compatible with 8GB, 16GB and 32GB capacity microSD, microSDHC and microSDXC memory cards.

You must use a microSD card with a Class10 speed rating.

We recommend using brand name memory cards for maximum reliability in high-vibration activities.

CHARGING THE BATTERY

If recording is occurring when battery reaches 0%, the camera will save the file and power OFF.

To charge the battery:

1. Connect the camera to a computer or USB power supply.
2. The charging status light remains ON while the battery is charging.
3. The charging status light will turn OFF when the battery is fully charged.

Charging time: about 4 hours

WEBCAM FUNCTION (ONLY FOR WINDOWS)

Your action cam also features a webcam function.

To use your cam as a webcam please follow the following steps:

1. Remove the battery and memory card.
2. Connect the camera to your computer using the USB cable provided.
3. If prompted, select the PC-Cam or Web Cam option.
4. If you are using Windows, driver installation will be automatic and complete within 2 minutes.

PLEASE NOTE:

Please note that the web cam function provides video only and does not include audio.

A headset or earphones with in-line mic as provided with many smartphones is required for audio.

Please note you may need to enter the settings of any app or program you use (e.g. Skype) so you can select your action cam as the preferred web cam option.



All product specifications are correct at time of print and are subject to change without prior notice.

Easypix GmbH reserve the right for errors or omissions.

For technical help please visit our support area on www.easypix.eu.

CONFORMITY

We hereby declare that the CE marking has been affixed to this product in accordance with the essential requirements and relevant provisions of the European directives.



The EC Declaration of Conformity can be downloaded here:

http://www.easypix.info/download/pdf/doc_panox_mx200.pdf

DISPOSAL



Dispose of packaging

For disposal, separate packaging into different types. Cardboard and board must be disposed of as paper and foil must be recycled.



Disposal of Waste Electrical and Electronic Equipment and/or Battery by users in private households in the European Union. This symbol on the product or on the packaging indicates that this cannot be disposed of as a household waste. You must dispose of your waste equipment and/or battery by handling it over to the applicable take-back scheme for the recycling of electrical and electronic equipment and/or battery. For more information about recycling of this equipment and/or battery, please contact your city office, the shop where you purchased the equipment or your household waste disposal service. The recycling of materials will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and environment.



Battery warning

- Never dismantle, crush, or pierce the battery, or allow the battery to short-circuit. Do not expose battery being placed in high temperature environment, if battery leaks or bulges, stop continue to use.
- Always charge using the charger. Risk of explosion if battery is replaced by an incorrect type.
- Keep the battery out of reach of children.
- Batteries may explode if exposed to naked fire. Never dispose of batteries in a fire.
- Disposed of used batteries observing local regulations.
- Before disposing the device, please remove the battery.



The camera is not suitable for children under 3 years because of choking hazard.



Made in China / Only for EU

easypix[®]
LIFESTYLE ELECTRONICS