 


LSJ ENManual 80P銅版紙,騎馬釘,共16面.
列印時設定一次印兩面且150%即可印出1:1

105mm+-2

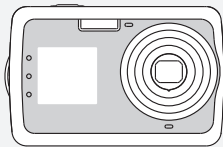

User Manual

1.0 Table of Contents

1. Total pages.....	01	8 Voice Recording Mode.....	09
2. Cautions.....	02	8.1 Voice Recording.....	09
3. Overall Introduction.....	02	9 Playback Mode.....	09
3.1 Accessories.....	02	9.1 Image Browsing.....	09
3.2 External View.....	03	9.2 Enlargement.....	09
3.3 Display Information.....	03	9.3 Thumbnail.....	10
4. Getting Ready.....	04	9.4 Playback Menu.....	10
4.1 Turn on / off Camera.....	04	9.4.1 Slide.....	10
4.2 Inserting the Battery.....	04	9.4.2 Rotate.....	10
4.3 Insert / Remove a Memory Card.....	04	9.4.3 DPOF.....	10
4.4 Attaching Wrist Strap.....	04	9.4.4 Protect.....	10
5. Buttons & Function.....	04	10 Setup.....	11
5.1 Tele / Wide Button.....	04	10.1 General Introduction.....	11
5.2 Focus Switch.....	04	10.2 LCD.....	11
5.3 Right / Flash Button.....	05	10.3 Beep.....	11
5.4 Left / Self-Timer and Front Display.....	05	10.4 Power Save.....	11
5.5 UP / Voice Memo Button.....	05	10.5 Imprint.....	12
5.6 Down / Exposure / Delete Button.....	06	10.6 Date & Time.....	12
6. Still Image Menu.....	06	10.7 Language.....	12
6.1 Mode Set.....	06	10.8 File.....	12
6.2 Size.....	06	10.9 USB.....	13
6.3 Quality.....	06	10.10 Frequency.....	13
6.4 White Balance.....	07	10.11 Reset All.....	13
6.5 Metering.....	07	10.12 Format.....	13
6.6 Shooting.....	07	11 PictBridge.....	14
6.7 Sharpnes.....	07	11.1 Image.....	14
6.8 Effect.....	07	11.2 Size.....	14
6.9 OSD Info.....	08	11.3 Layout.....	14
6.10 Face Detection.....	08	11.4 Print.....	14
7. Movie Clip Mode.....	08	12 USB Connection.....	15
7.1 Movie Recording.....	08	12.1 Computer/Notebook Connection.....	15
7.2 Movie Menu.....	08	12.2 Printer.....	15
7.2.1 Video Size.....	08	12.3 PC Cam.....	15
7.2.2 Metering.....	08	13 Appendix.....	16
7.2.3 Effect.....	08	13.1 Spec.....	16
7.2.4 OSD Info.....	08		

2.0 Cautions

- Do not try to disassemble the camera by yourself, which may damage the camera or cause electric shock.
- Do not fire the flash in a close distance (less than 1 meter); it may hurt your eyes.
- Keep the camera away from the reach of children or animals to prevent them from swallowing the batteries or small accessories.
- Stop using the camera if any kind of liquid or foreign object enters the camera. If it happens, power off the camera and contact your dealer for help.
- Do not operate this camera with wet hands; it may cause electric shock.
- The camera may be damaged in an environment of high temperature.
- To avoid electricity leakage, please remove the battery if the camera is expected not to be in use for a long period.
- It is normal that the temperature of the camera body rises if the camera works for a long time.

Small Tip to Save You Big Headache

A digital camera is in a way very similar to a computer. If the digital camera hangs itself during operation, please follow the procedures below and most likely the camera can be re-activated.

1. Remove the battery.
2. Reload the battery.
3. Switch on the camera.

3.0 Overall Introduction

3.1 Accessories

User Manual



 
USB Cable



Wrist Strap



Camera Pouch

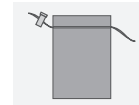

Li-ion Battery

 


Adapter (Optional)



3.0 Overall Introduction

3.2 External View

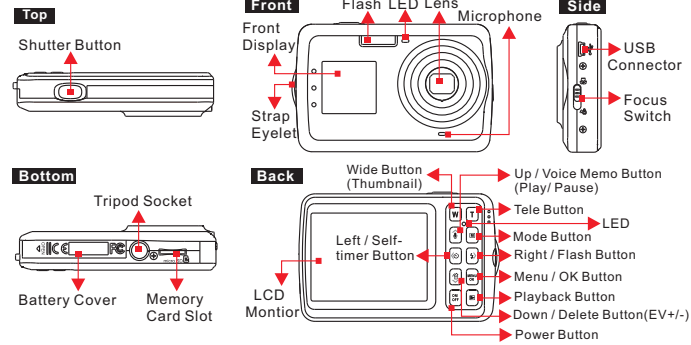

3.3 Display Information

1 Mode
 Image Shooting Mode
 Movie Clip Mode
 Voice Recording Mode
 Playback Mode

2 Memory Card
 Memory Card inserted
 No Memory Card

3 Voice Memo

4 Quality
 Super Fine
 Fine
 Normal

5 Sharpness
 Soft
 Normal
 Vivid

6 Face Detection
 On Off

7 Shooting
 Single
 Continuous

8 Exposure +/- 2EV
 (0.5EV / Step)

9 Battery Status
 Battery Full
 Battery Half Drained
 Battery Drained

10 Zoom Status Indicator
 Digital Zoom

11 Available Shots / Video Time

12 Flash Mode
 Auto Flash
 Fill-in Flash
 Flash Off

13 Focus Range (Macro)

14 Mode Set
 Auto Mode
 Smart Mode
 Portrait Mode
 Night Mode
 Program Mode
 Landscape Mode
 Transform Mode
 Backlight Mode
 Auction Mode
 Sport Mode

15 White Balance
 Auto
 Daylight
 Cloudy
 Tungsten
 Fluorescent

16 Size-Image Shooting
 4000x3000
 2592x1944
 2048x1536
 1280x960

Size-Movie Clip
 320x240
 640x480
 720x480

17 Self-timer
 Self-shooting by Pressing Shutter Button
 2 Seconds
 10 Seconds
 Double

4.0 Getting Ready




4.1 Turn on / off Camera

 
 
- + Press the Power Button (approx. 2 seconds) to turn on the camera.
- + Press the Power Button again to turn off the camera.



4.2 Inserting the battery

1. Power off the camera.
2. Open the battery cover.
3. Insert the battery.
4. Close the battery cover.

- + The indication of the battery status.
 - (): Battery power is full.
 - (): Battery power is half drained.
 - (): Battery power is drained. Replace with new battery.
- + The batteries may run out if kept inside the camera and not in use for a long time.
- + The battery may not work normally under 0°C or over 40°C.

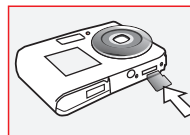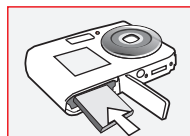


4.3 Insert / Remove a Memory Card

1. Power off the camera.
2. Insert the memory card into the card slot and press it down until a click sound is heard.
3. Please press the memory card again to get it out once a click sound happens.

Note: There is no built-in flash memory.

4.4 Attaching Wrist Strap

 
When attaching the wrist strap, move the length adjustment buckle slightly away from the end of the wrist strap.

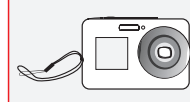

150mm+-2

5.0 Buttons & Function

 
5.1 Tele/Wide Button

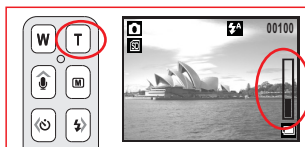

Press the Tele button, the zoom bar indicator will appear at the right side of the LCD monitor. It shows the current zoom status.

Image shooting : up to 8X.

 5.2 Focus Switch

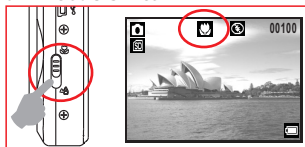




The focus range : Normal : 1.2M ~ infinity
Macro : 20 cm

Note : Please make sure that the focus is set correctly. Otherwise, the image will be out of focus. Please push the focus switch up to start Macro function. The Macro icon "M" will appear on the LCD monitor.

5.0 Buttons & Function

5.3 Right / Flash Button

By pressing down the Flash/Right Button in order, you can have different flash options as follows:

	Auto Flash	The flash fires automatically as required under shooting mode.
	Fill-in Flash	This mode will enable the flash to fire in any circumstances.
	Flash Off	The mode will disable the flash to fire in any circumstances.



5.4 Left / Self-timer and Front Display

1. Choose self-timer function by pressing self-timer (left) button. This operation will turn on the front display, and turn off the 2.7" TFT LCD at the same time.


2. Choose self-timer types

* **Self-shooting by pressing Shutter Button.** 

Users can take pictures continuously until press other buttons. If users press Shutter Button again, camera will start 2 seconds selftimer. If users press other buttons, except Selftimer Button, camera will turn off front display and turn on the 2.7"(main) display at the same time.

* **2 seconds.** 

The image will be taken in 2 seconds after the Shutter Button is pressed.

* **10 seconds.** 

The image will be taken in 10 seconds after the Shutter Button is pressed.

* **Double.** 

Camera will start 10 seconds selftimer firstly and then 2 seconds selftimer.

3. Your camera will detect your face automatically. (Under self-timer mode, face detection function is default setting.)

 
4. In 2 seconds, 10 seconds and Double Self-timer Mode, after photo was taken, camera will automatically turn on the 2.7"(main) display again, and turn off the front display at the same time.



5.5 UP / Voice Memo Button


You can have two ways to record voice memo for images.

In Image Shooting Mode:

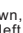- When the Voice Memo Button is pressed down, the Voice Memo icon () will appear at the left side of LCD Monitor.
- Press down the Shutter Button to take a picture.
- Then you can record a voice (max. 10 sec.) right after the image is taken or press Shutter Button to stop voice memo recording.


In Playback Mode:

 - Press down the Voice Memo Button.
- Press down the Shutter Button to start / finish voice memo.

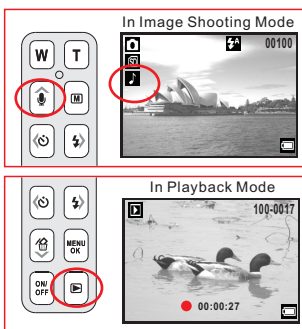

5.0 Buttons & Function

 5.6 Down / Exposure / Delete Button

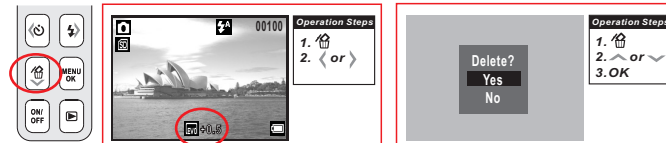

In Image Shooting Mode :
Press the Delete Button firstly and then press Left/Right Button to adjust the value of exposure. (-2EV~+2EV , 0.5EV/step)

 
In Playback Mode :
Press the Delete Button to delete single image.

6.0 Still Image Menu



In still image and movie clip modes, press OK/Menu to enter menu setting.

6.1 Mode Set (Default: Auto)

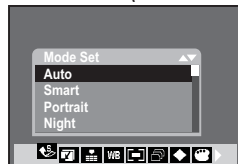


There are total 10 options for scene modes setting.

- | | |
|-------------------|--------------------|
| (P) Auto Mode | (L) Landscape Mode |
| (S) Smart Mode | (T) Transform Mode |
| (P) Portrait Mode | (B) Backlight Mode |
| (N) Night Mode | (A) Auction Mode |
| (P) Program Mode | (S) Sport Mode |

PS : When program mode was selected, you can have more settings as follows. White Balance, Metering, Shooting, Sharpness, Effect.

 6.2 Size (Default: 5M)

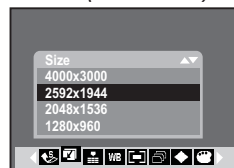

There are total 4 options for image size setting.
12M(4000x3000)(Interpolation)
5M (2592x1944)
3M (2048x1536)
1M (1280x960)

 
6.3 Quality (Default: Fine)



There are total 3 options for image quality setting.
(S) Super Fine
(F) Fine
(N) Normal

6.0 Still Image Menu


6.4 White Balance (Default: Auto)

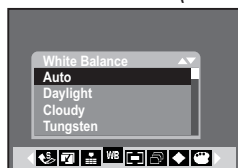

Under Program scene mode "P", you can enter menu to set White Balance.

	Auto	Adjusting the white balance automatically
	Daylight	Under the strong light environment
	Cloudy	Under the cloudy light environment
	Tungsten	Under the tungsten light environment
	Fluorescent	Under the fluorescent light environment

 6.5 Metering (Default: Multi)

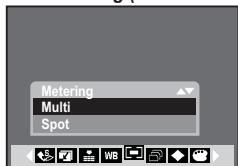


Under Program scene mode "P", you can enter menu to set Metering.

Multi Metering : Exposure will be evaluated according to the average of the available light source in the image area. This is suitable for general use.

Spot Metering : If the subject is against the light source or has little contrast, you can use this function to make the subject brighter.

 6.6 Shooting (Default: Single)

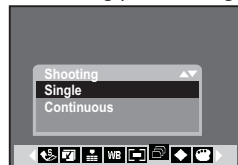

Under Program scene mode "P", you can enter menu to set Shooting.

Single : No continuous shooting.

Continuous : Select Continuous shooting firstly. When camera returns to image shooting mode, press shutter button to take photos. 3 continuous photos will be taken. (Flash off is default setting.)


6.7 Sharpness (Default: Normal)



Under Program scene mode "P", you can enter menu to set Sharpness.

	Soft	This effect can make the edge of the captured image look smoother, which is suitable for image editing on PC.
	Normal	This effect can make the edge of the captured image look sharp, which is suitable for printing out.
	Vivid	This effect can make the edges of your captured image look sharper but may result in more image noise.

 6.8 Effect (Default: Normal)

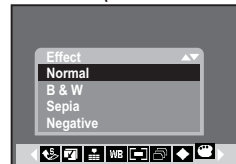

Under Program scene mode "P", you can enter menu to set Effect.

Normal	No special effect is added to the picture.
B & W	Turn the image into black and white.
Sepia	Turn the image into yellowish brown.
Negative	Turn the image into negative film effect.

6.0 Still Image Menu

6.9 OSD Info. (Default: Detail)



There are 3 options for the OSD information.

Off : No OSD information.

Basic : Basic information.

Detail : Detailed (all) information.

6.10 Face Detection (Default: On)



Face Detection allows you to focus on human faces. Face Detection can only be used with still image.

 
Subjects not Suitable for Face Detection

1. The face is obscured by glasses, a hat or hair.
2. A person turned sideways, or who has his / her head lifted.
3. The subject is too far to be recognized as a face.

Note: The Face Detection "Face Detect" icon will be displayed at the bottom of the LCD monitor.

7.0 Movie Clip Mode

7.1 Movie Recording

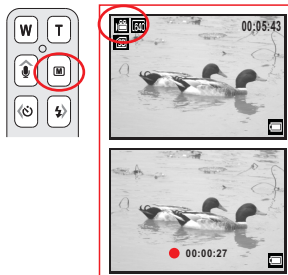


1. Press Power Button to turn on the camera.
2. Press Mode (Mode) Button to switch to Movie Clip Mode (Movie).
3. Press Shutter Button to start or stop movie recording
4. Press Up Button to pause / resume during recording.
5. Press Up Button to Play / Pause the movie clips when in Playback Mode.

PS : Because of FAT32 spec limitation, the maximum recording capacity for one single file is 4GB.

7.2 Movie Menu

 7.2.1 Video Size (Default:640)

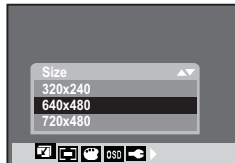

There are 3 options for video size setting.

- 320 (320 x 240)
- 640 (640 x 480)
- 720 (720 x 480)

7.2.2 Metering

Please refer to 6.5 on page 7

7.2.3 Effect

Please refer to 6.8 on page 7

 
7.2.4 OSD Info

Please refer to 6.9 on page 8

8.0 Voice Recording Mode


8.1 Voice Recording

1. Press Mode (M) Button to switch to Voice Recording Mode ().
2. Press Shutter Button to start the recording and press Shutter Button again to stop the recording.

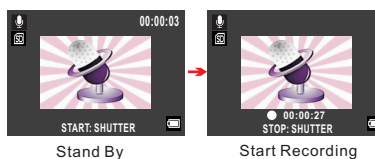


9.0 Playback Mode

 9.1 Image Browsing

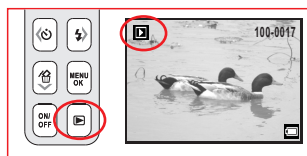

 1. Press Playback Button "▶" to playback Still Images, Movie Clips and Audio Clips.
2. This camera will show the stored still images, movie clips, and audio clips (voice recording).
3. Press the Right or Left Button to select the file you would like to play.
 - a. Still Images : Without icon display.
 - b. Movie Clips : "▶"
 - c. Audio Clips (voice recording) : "▶"
 Please connect with PC by USB cable to play audio clips.

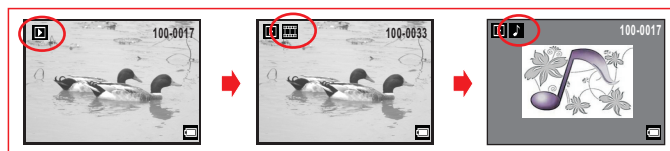


9.2 Enlargement



1. In Playback Mode, select one of stored still image. Press TELE Button to enlarge a still image up to 5.0x (depending on the original size of the image).
2. Use the UP / DOWN / LEFT / RIGHT Button to explore the image and check the focus.
3. Press the OK Button to return the image to its normal size.

9.0 Playback Mode

 9.3 Thumbnail (Small Images)

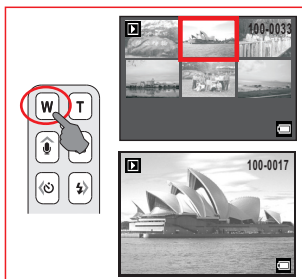

1. In Playback Mode, press WIDE Button to display the stored files by thumbnail.
2. Press OK or TELE Button to go back to normal Playback display.

 
9.4 Playback Menu

9.4.1 Slide




This function enable you to view photos with slide show.

9.4.2 Rotate

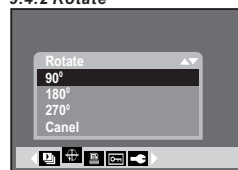

Use this function to rotate photos.

 
9.4.3 DPOF

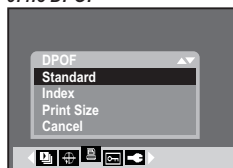

This function can only be used when a memory card is inserted. This option allows you to put the print quantity (Max. 99 pcs) on your memory card.

<One Pic> - specifies the number of copies for a selected image by pressing up/down button and then press left/right to go to next image.
<All Pics> - specifies the number of copies for all pictures apart from movie clips and voice recording files.

 
9.4.4 Protect

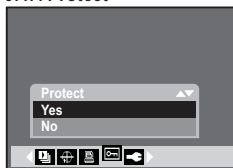

1. In Playback Mode, press the Menu Button and select "Protect" function.
2. Select Yes to execute it.
3. Then "Protect" will show on the LCD monitor.
4. You can press "No" to cancel "Protect" setting.

10.0 Setup

10.1 General Introduction

Press OK/Menu Button and select Setup Mode. "  "



Operation Steps
 1. OK / MENU
 2.  or 
 3.  or 
 4. OK / MENU
 5.  or 
 6. OK / MENU

1. LCD
2. Beep
3. Power Save
4. Imprint
5. Date & Time
6. Language
7. File
8. USB
9. Frequency
10. Reset All
11. Format

 
10.2 LCD (Default: Normal)



There are 3 options for the LCD brightness .


1. Dark
2. Normal
3. Bright

10.3 Beep (Default: On)

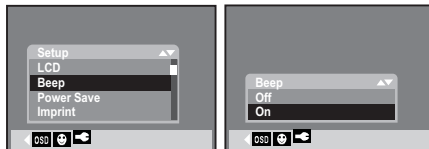

This function allows you to switch on/off system sound.

 
10.4 Power Save (Default: 3 Min.)

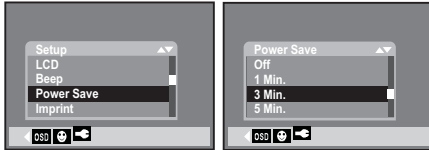

1. You can select 1, 3 or 5 or 10 minutes for power save setting.
2. Or you select " Off " to disable this function. Please note that the camera will not turn off automatically. The battery may get drained soon if the camera is being on for a long time.


10.0 Setup

 10.5 Imprint (Default: Off)

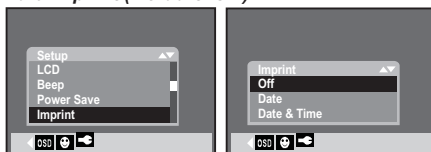

This function allows you to print the date or date & time on the image.

 10.6 Date & Time (Default: Off)

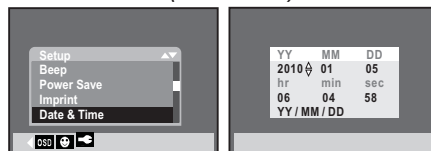

This function allows you to select the type of the date & time and fill in the current date & time.

10.7 Language



There are 12 options for Language setting :

1. English
2. Japanese
3. German
4. French
5. Spanish
6. Italian
7. Turkish
8. Russian
9. Thai
10. Portuguese
11. Simplified Chinese
12. Traditional Chinese

 
10.8 File (Default : Series)



This setting allows you to name the files.
If "Series" is selected, the file name will follow the latest stored file name.
If "Reset" is selected, the next file name will be set from 0001 even after formatting, deleting all, or inserting a new memory card.

10.0 Setup

10.9 USB (Default: Computer)

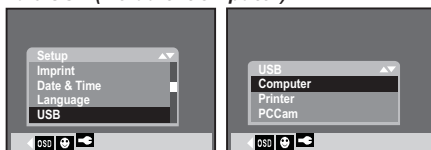

You can select an external device to connect the camera by using USB Cable.

Computer :

If Computer is selected, the camera will turn off the LCD Monitor and automatically connect to your PC. You can download images or audio files to PC.

 
Printer :

If Printer is selected, the camera allows you to select detail options of printer setting via PictBridge function when printer is connected

PC Cam :

Select PC Cam in USB setting. Connect camera as PC Cam with PC or Notebook.

10.10 Frequency (Default: 50Hz)

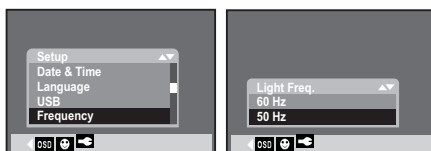


The frequency setting is for Anti-flicker.

60Hz: USA, Taiwan, Korea, Japan.


50Hz: UK, Germany, Italy, Spain, France, Netherlands, China, Portugal.

 10.11 Reset All (Default: No)

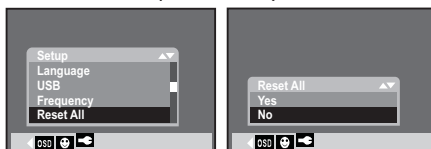

This option provides the function of recalling all default values except the Date, Time, Language and Light Frequency.

 10.12 Format (Default: No)

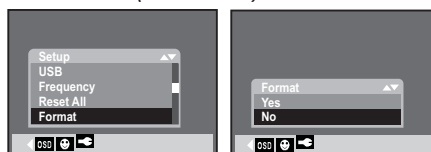


This function allows you to format the memory card.

Note:

All the data (includes protected files) stored in the memory card will be deleted after the formatting.

 11.0 PictBridge

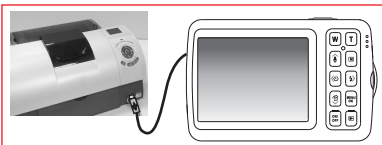

If the printer supports the interface of PictBridge, then you can have your camera connected with the printer by the supplied USB cable to have the stored images print out directly.

 
1. Turn on both the camera and the printer.
2. Press the OK/Menu Button to go to SETUP Mode.
3. Go to USB and select PRINTER for printer connection.
4. Use the supplied USB cable to connect the camera to the PictBridge-supported printer as shown above.

11.1 Image



You can choose to print out the selected image or all images. No matter which one you choose, one piece is default setting. (You can not select the number of prints.)

11.2 Size

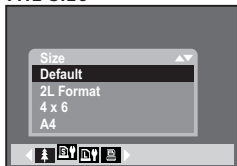

You can set the size of the printing paper.

 
1. Default
2. 2L Format
3. 4X6
4. A4

11.3 Layout



This camera only provides default layout.


11.4 Print

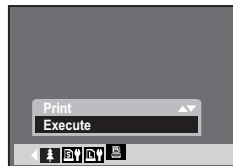

You can execute the print action.

12.0 USB Connection

 12.1 Computer / Notebook Connection

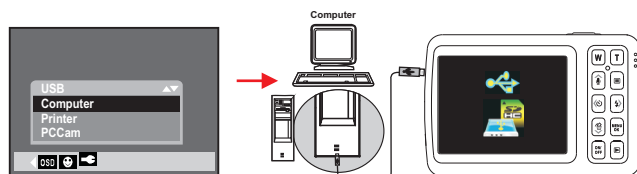


1. In Setup mode, enter USB item and then select Computer.
2. Use the USB cable to connect this camera to your PC or Notebook.
3. Then you can download the images and files from this camera to your PC or Notebook.

12.2 Printer

Please refer to chapter 11 (PictBridge) for detail introduction.

 12.3 PC Cam

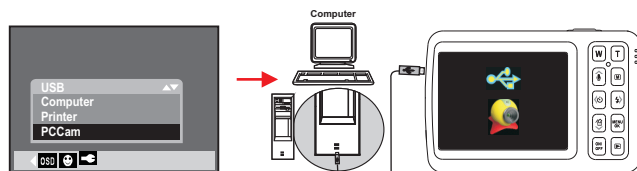

1. In Setup mode, enter USB setting and then select PC Cam.
 2. Use the USB cable to connect this camera to your PC or Notebook.
- Note : UVC driver supports XP(SP2) / Vista / Win7

13.0 Appendix

13.1 Specification

Image Sensor	5 Mega Pixels CMOS Sensor (Max.12.0M via interpolation)
Lens	Fixed Focus (F3.2 / f=5.23mm)
Digital Zoom	Still Image mode: 1X ~ 8X, Play mode: 1X ~ 8X
LCD	Main: 2.7" TFT LCD, Front: 1.44" TFT LCD
Focus Range	Normal: 1.2M ~ infinity, Macro: 20 cm
Shutter Speed	Normal: 1/2 sec 1/2000 sec, Night Scene: 3 sec 1/2000 sec
Flash Mode	Auto, Fill-in Flash, Flash off
Self-Timer	Self-shooting by pressing shutter, 2 sec, 10 sec, Double
White Balance	Auto, Daylight, Cloudy, Fluorescent, Tungsten
Effect	Normal, B&W, Sepia, Negative
Sharpness	Soft, Normal, Vivid
Scene Mode	Auto, Smart, Portrait, Night, Program, Landscape, Transform, Backlight, Auction, Sport
Shooting Image Size	12M, 5M, 3M, 1M
Movie Clip	720x480(D1), 640x480(VGA), 320x240(QVGA)
Voice Recording	Yes
PictBridge	Compatible
Storage Media	Supports Micro SD Card (up to 32GB), Internal Memory: N/A,
Interface	USB 2.0 High Speed, Built-in Microphone, Buzzer out
Power Source	BL-5B Li-ion Battery , use standard USB interface for charging
Dimension	94mm x 61mm x 18.4mm
Weight	Approx. 80g (without battery and memory card)
Special Features	1.Front panel plus for self-timer 2.Face detection supported 3.Up to D1 video recording 4.Smart mode supported (Portrait, Night and Backlight auto detection) 5.Transform mode supported (Horizontal & Vertical enlargement) 6.12M Slim type design DSC
System Requirement	
System Requirement for Windows	<ul style="list-style-type: none"> • PC with processor better than Pentium II (500MHz) • Mass Storage function supports 2000 / ME / XP / Vista / 7, Mac OS X 10.4 or later • Webcam function supports Windows XP (SP2) / Vista / 7 • Minimum 256MB • USB port (1.1 or 2.0 Standard interface) • 800x600 pixels, 24-bit color display compatible monitor
System Requirement for Macintosh	<ul style="list-style-type: none"> • Power Mac G4 or later • Mac OS X 10.4 or later • Minimum 256MB RAM • USB Port

Specifications and product design are subject to change without any notice for further improvement